



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver

*not included


Essential Dimensions & Water Pipe Line:

Unit: mm/inch

Over Head shower

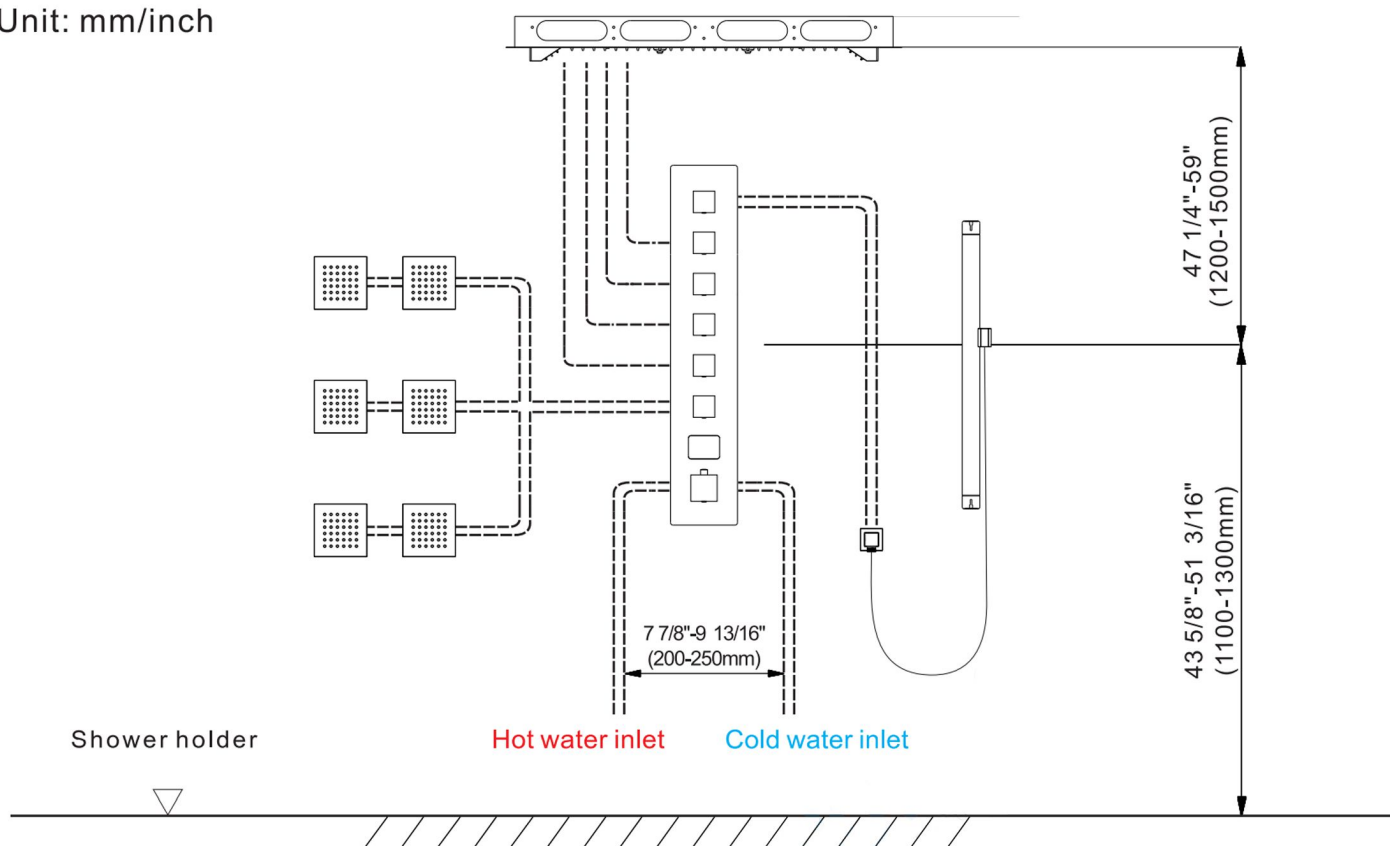


Essential Dimensions & Water Pipe Line:

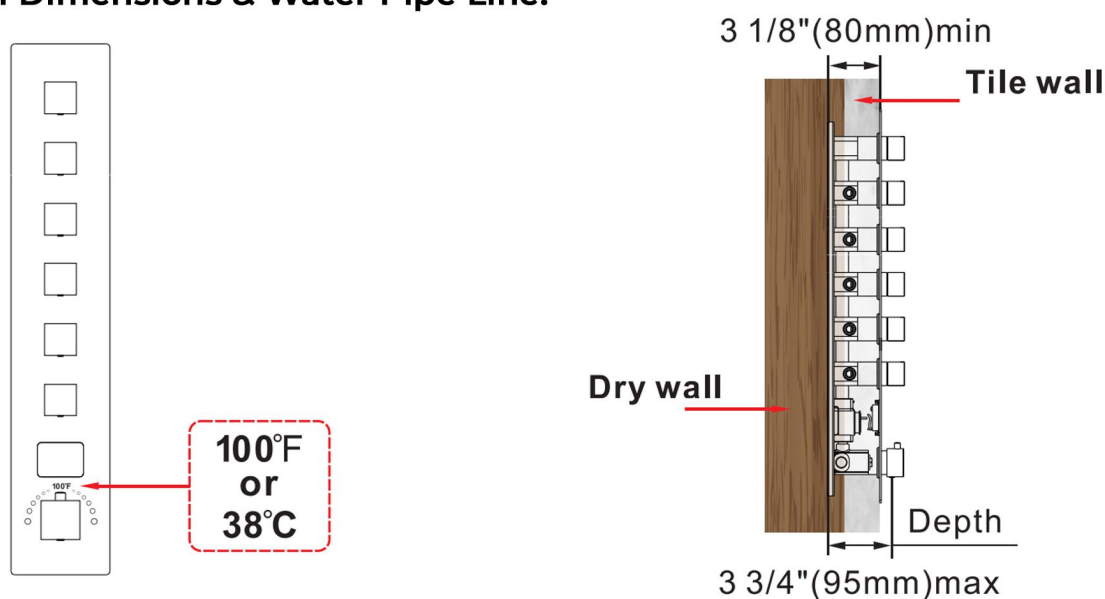

Notice:

1. The installation depth of the main body should be no less than 3 1/8" (80mm) and no more than 3 3/4" (95mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
2. The opening size of ceramic tile shall be smaller than the deck plate size.


Piping Instructions before Tiling:

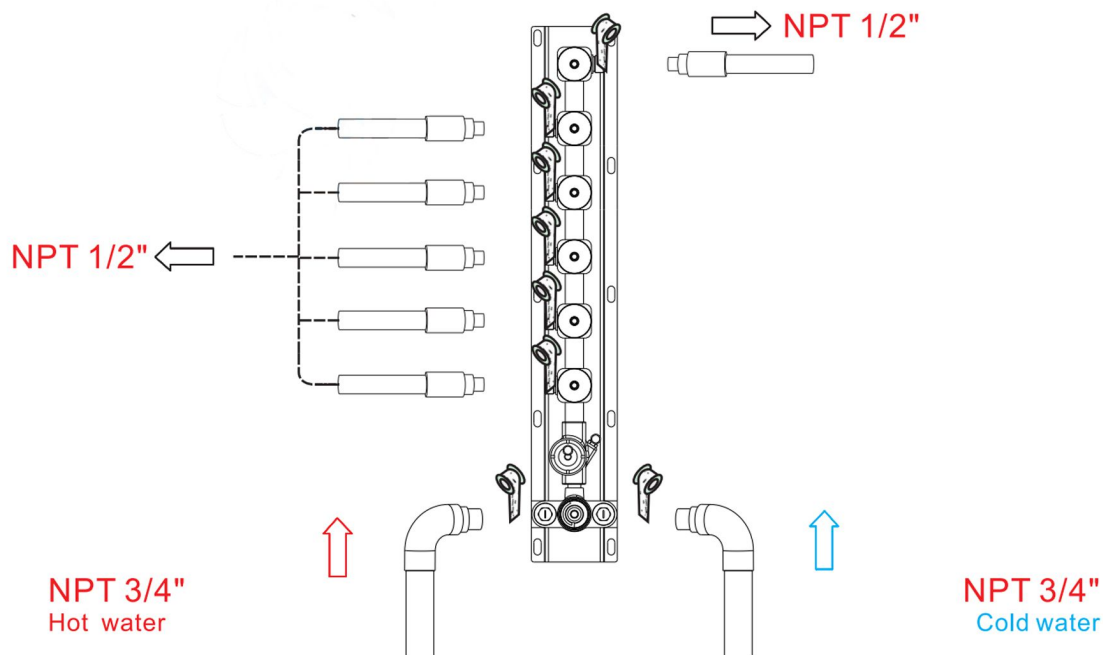

- 1.As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction when installing the pre-buried main body.
- 2.Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to the "on" position to check for leaks in the mixed outlet pipes.


Main Body Valve Installation:

Step 1

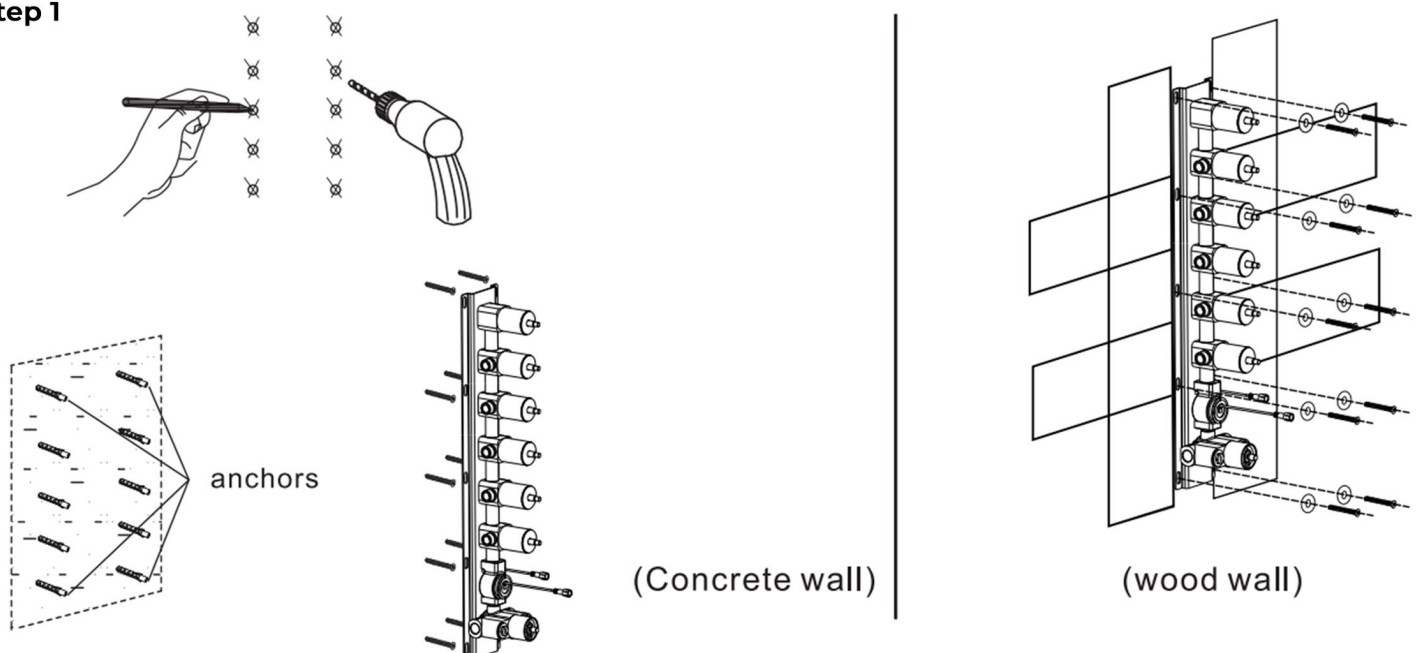


- 1.Make marks according to the size of the main body valve, and then drill anchors into the wall (concrete wall).
- 2.Lock the main body to wood directly with screws (wood wall).
- 3.When installing the main body, please mark the UP side up and do not install it upside down.

Step 2


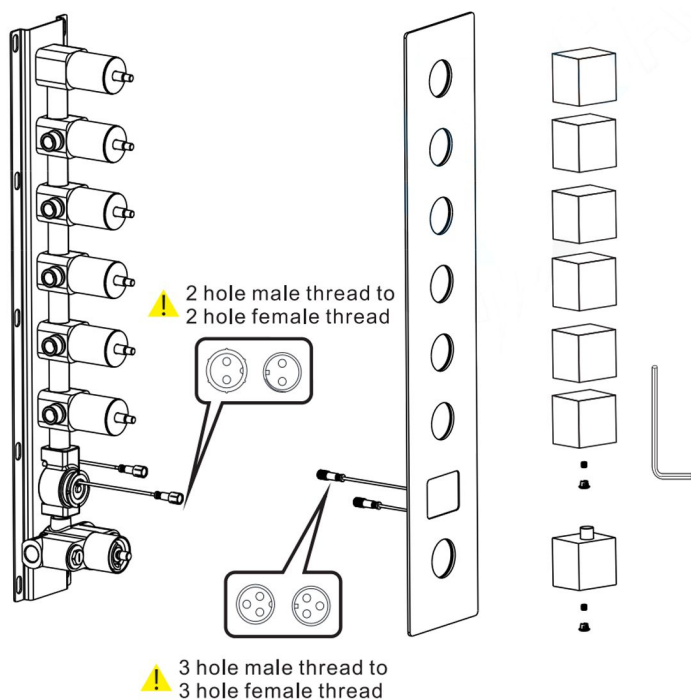


Precautions for Handwheel Installation

1. The line can't be misplaced; it should be kept in line. Otherwise, the water temperature of 100°F or 38°C will not be correct.

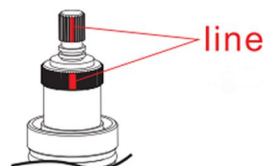

 2. Please ensure that the plastic locating ring (A) and handwheel locating pin (B) are kept in the same line with 100°F or 38°C. Otherwise, the water temperature will be incorrect.

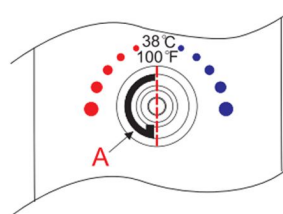

Note:

- Do not remove the white wear ring; otherwise, the handwheel will be damaged.
- Water flow control: clockwise Turn-down and stop, anti-clockwise Turn-up to max

1. Please install the deck plate, water diverters, and water diverter rods step by step.
2. Install the handle with the screw and handle cap.