


Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets

Product Code: LED-SHOWER-HEAD-0522GO

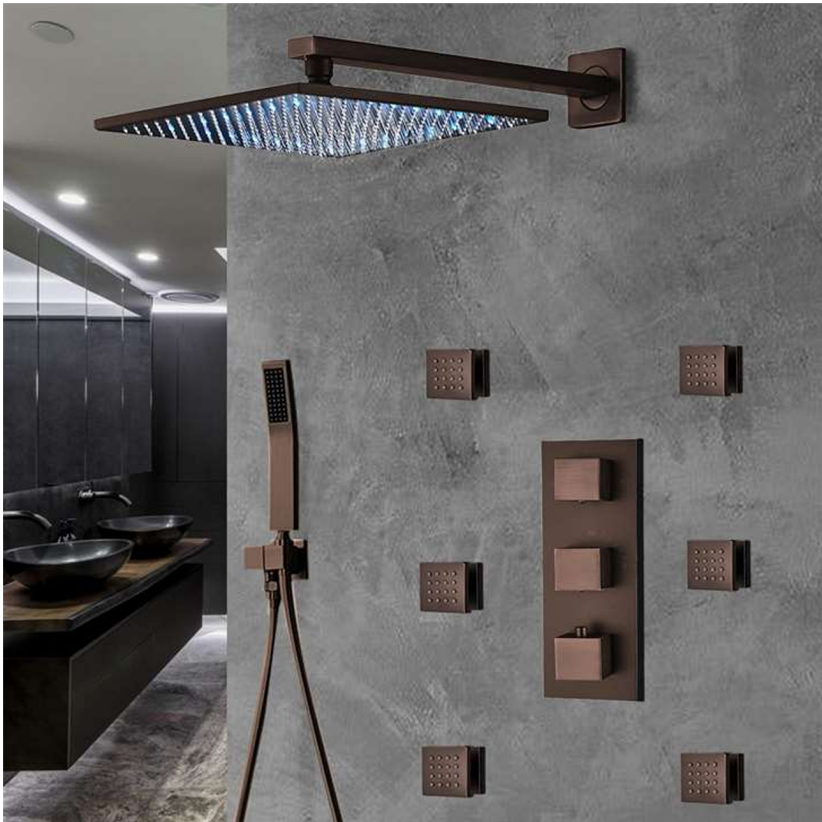

BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker



Screwdriver


*not included

Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets

Product Code: LED-SHOWER-
HEAD-0522GO


Wall Mount Shower Installation Instructions:

Step 1:

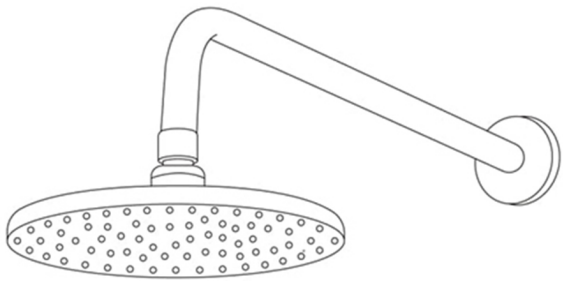


Step 2:


Parts included:

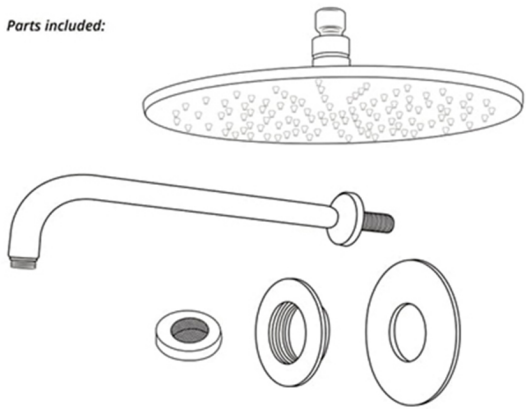


Step 3:

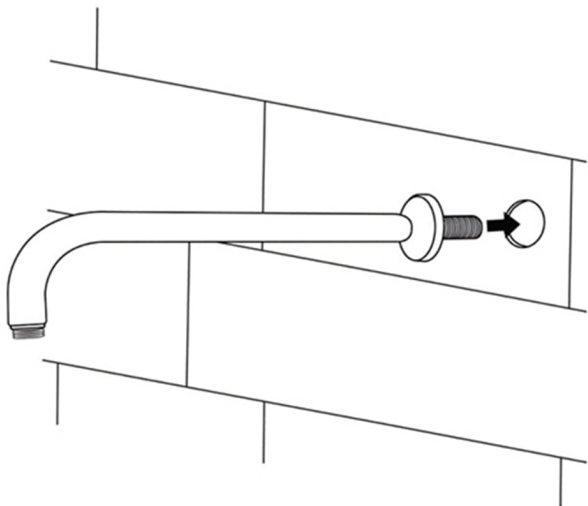


Step 4:

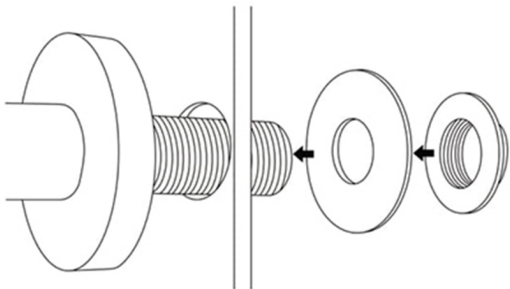

Step 5:

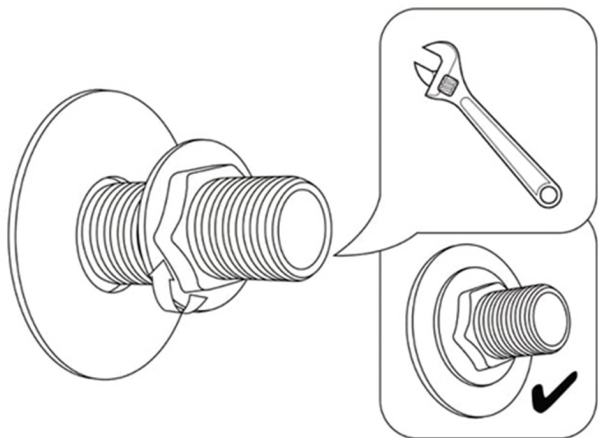


Step 6:

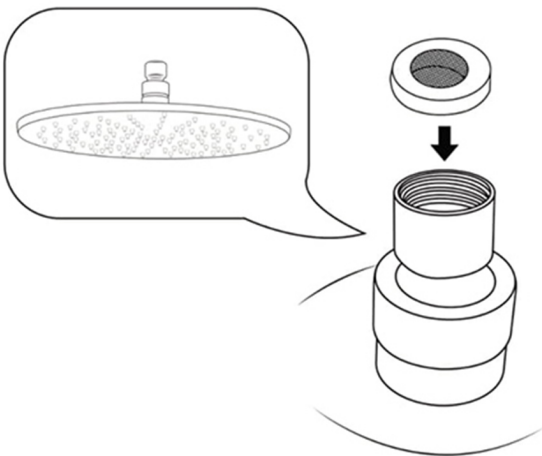


Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets

Product Code: LED-SHOWER-
HEAD-0522GO

Step 7:

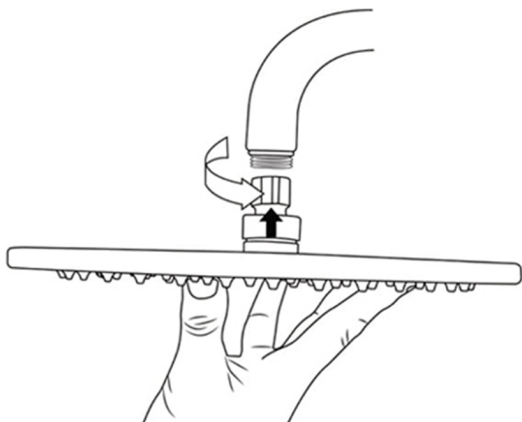

Step 8:

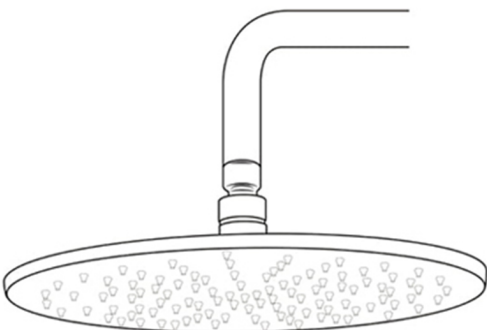

Step 9 (Note):

No tools required, G1/2" connector fits standard sized shower plumbing.



- ✓ Use your hands counterclockwise to unscrew the old showerhead and removed it.
- ✓ Take out the Hiendure Showerhead, make sure the shower filter is placed in the connector.
- ✓ Ensure the showerhead full horizontal alignment wall mounted shower arm thread
- ✓ Use your heads clockwise to tighten showerhead.


Product shown is only for installation display purpose

1. Remove the old shower head by using the channel lock pliers or monkey wrench. Be sure to turn the pliers counter-clockwise to loosen the old shower head. (tip: right is tight, left is loose.)
2. Remove the shower arm by turning it by hand counter-clockwise. Make sure you remember to apply putty or tape to the new arm. (tip: using teflon tape is less messy)
3. Apply teflon tape to the threading of the shower arm by wrapping it around the threads, go all the way around 3 or 4 times depending on the quality of the teflon tape.
4. Install the new shower arm by going clockwise by hand until it is tight, then put painters tape around the arm and tighten the arm with the channel lock or monkey wrench.
5. Place teflon tape around the threads on the shower head and then place the shower head onto the shower arm by turning the shower head clockwise after the shower arm is already in the wall.


Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets

Product Code: LED-SHOWER-
HEAD-0522GO


Step 1:

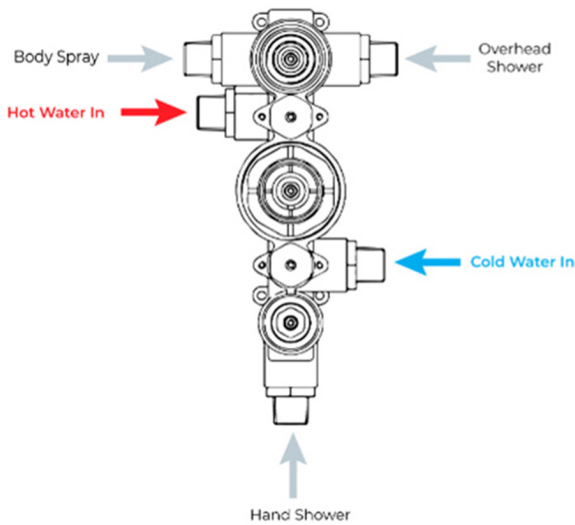


Step 2:

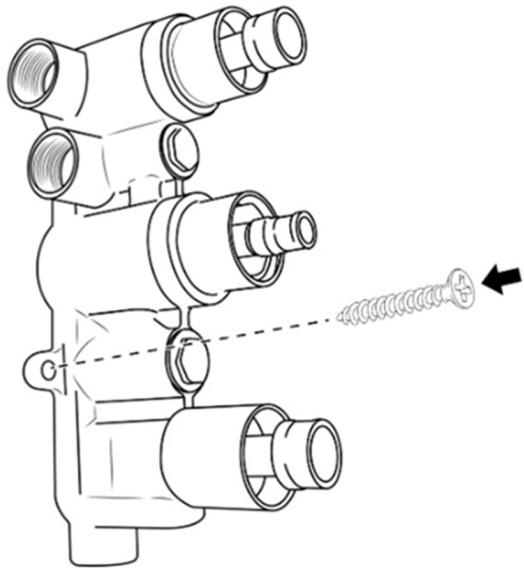


Step 3:

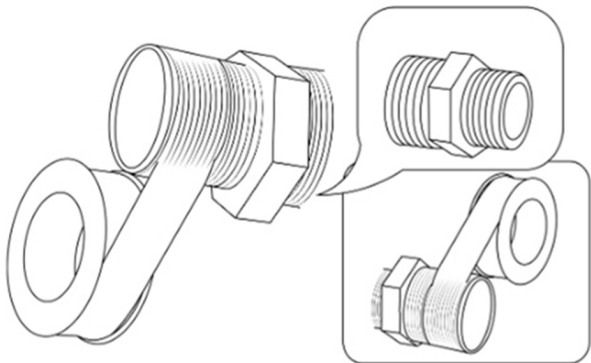


Step 4:

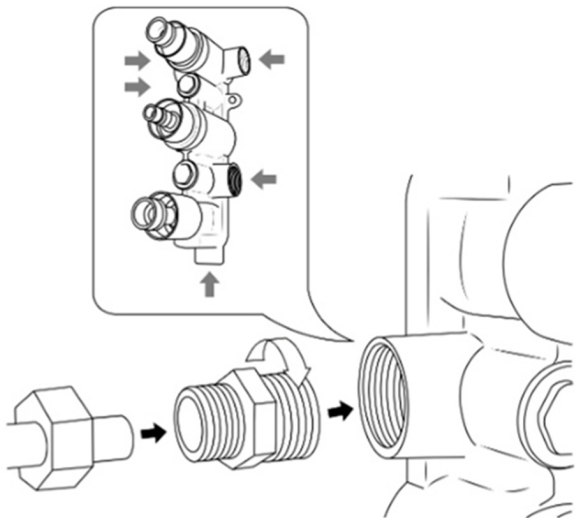

Step 5:

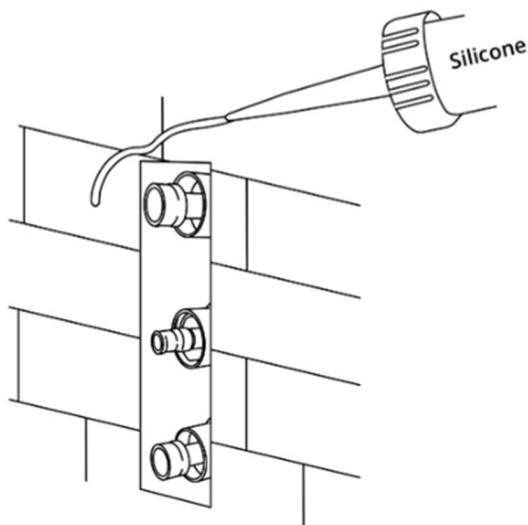


Step 6:

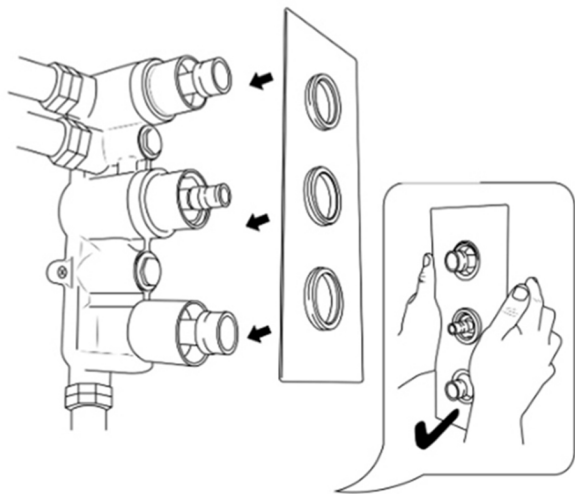


Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets

Product Code: LED-SHOWER-
HEAD-0522GO

Step 7:

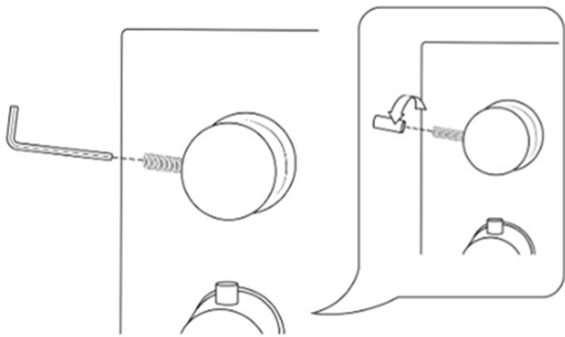


Step 8:

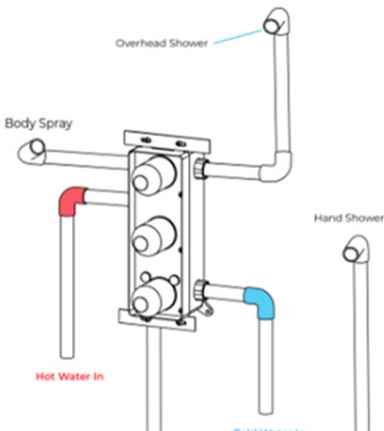


Body Jets Installation Instructions:


Step: 1

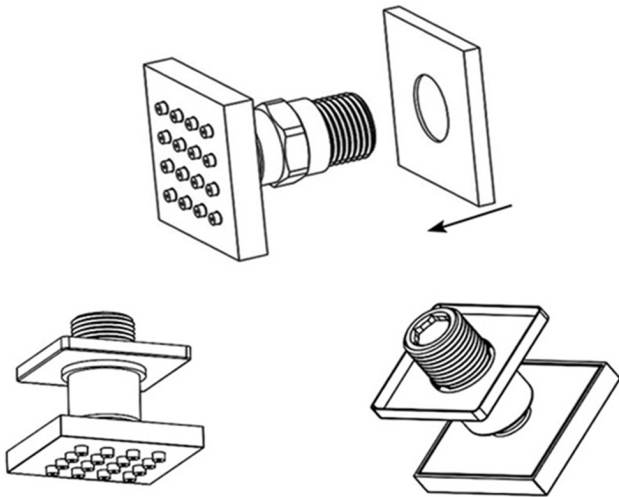


Step: 2

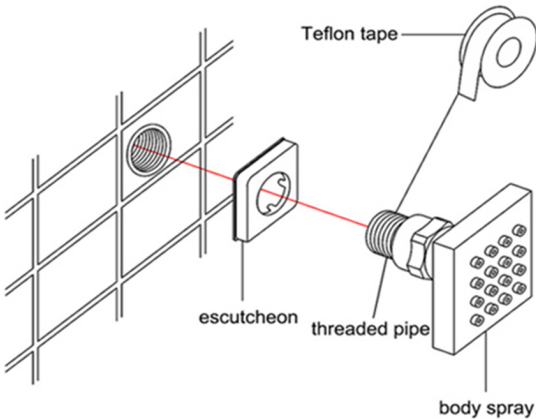

Step: 3

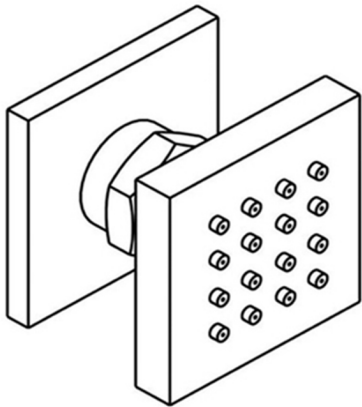

Step: 4

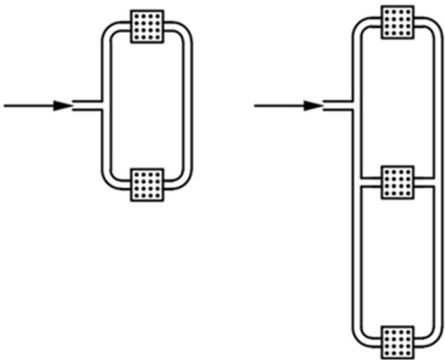


Fontana Trialo Light Oil Rubbed Bronze Color Changing LED Shower Head with Adjustable Body Jets


Product Code: LED-SHOWER-
HEAD-0522GO

Hand Shower Installation Instructions:


Step 1

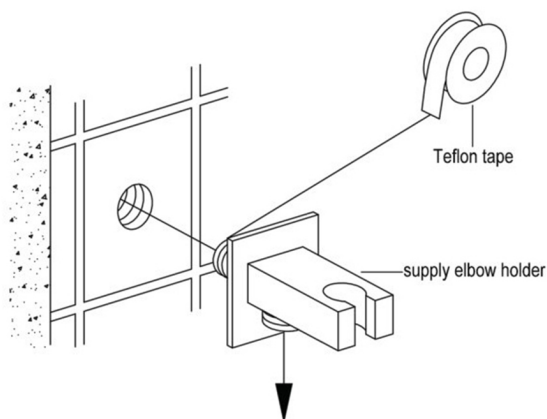


Step 2

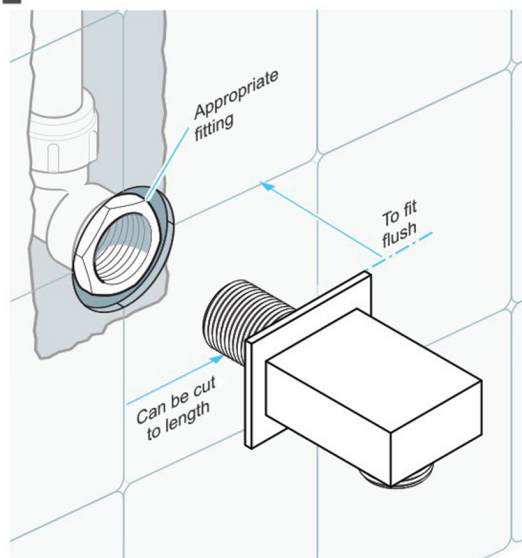

Step 3

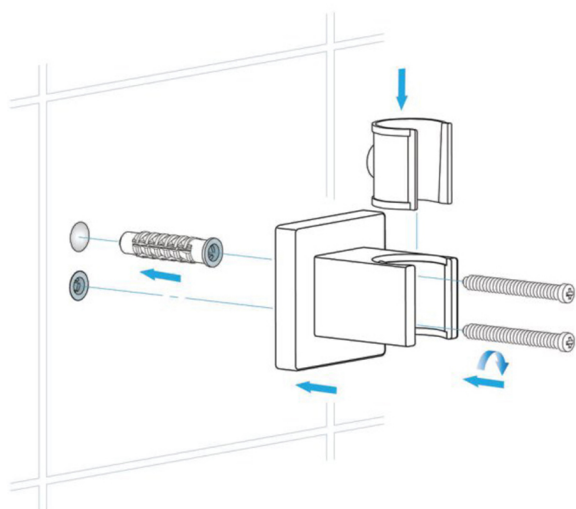

Step 4

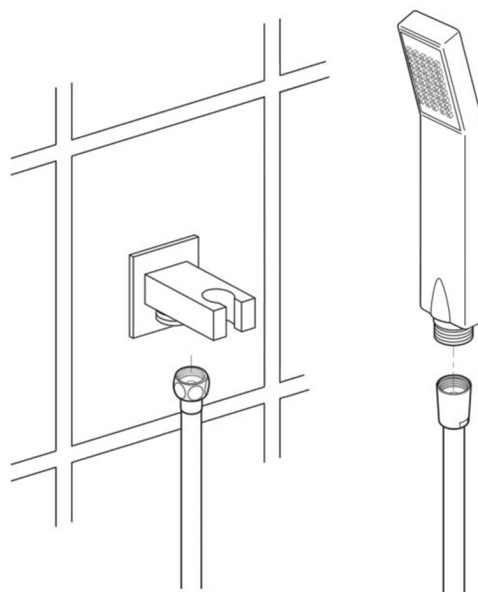

Hand Shower Outlet Installation

• Complete the outlet pipework ensuring it ends in an appropriate 15mm x 1/2" BSP female thread elbow.
Note: This fitting is not supplied as variations in installations require the selection of a suitable solder or compression fitting.

• Install the 'Wall Outlet', thread long male 1/2" BSP into the appropriate female fitting using PTFE tape to give a watertight joint.

Note: The thread can be cut to size if required. Make sure that all debris is removed from the connector and the section that has been cut is dressed correctly, before installation.

The minimum required water pressure is 0.05 MPa (0.5 bar).

Flow rate 2.5 GPM (9.5 LPM).