

MATTE BLACK SHOWER SYSTEM WITH 10" RAIN SHOWER HEAD AND HAND SHOWER INSTALLATION INSTRUCTIONS



PRIOR TO INSTALLATION

Please read installation instructions below. All plumbing should be installed in accordance with applicable building codes and regulations.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

All products must be installed by a professional and certified plumber otherwise warranty may be voided.

POSSIBLE TOOLS REQUIRED*




Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill




Pencil or Marker



Screwdriver

*not included


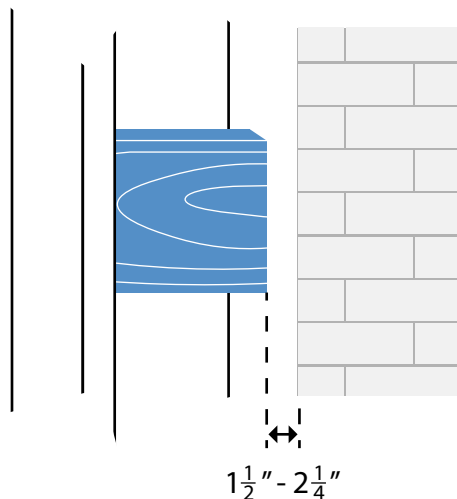


1. Prepare Location

Locate studs in the wall. Add wood blocking behind the finished wall where the mixer, shower arm, and water outlet will be placed. Total distance from finished wall should be between $1\frac{1}{2}$ " and $2\frac{1}{4}$ " for the valve.

2. Mount Valve

Rough-in valve mounts to internal pipes. Any further support needed can be manually done by a licensed plumber or professional.

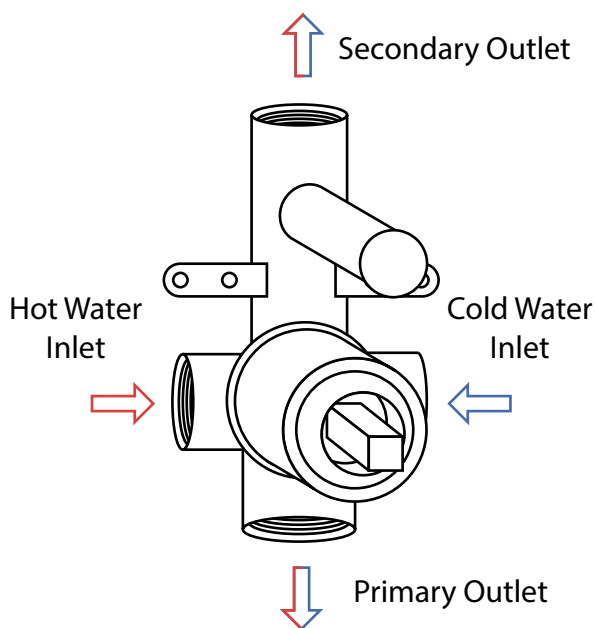
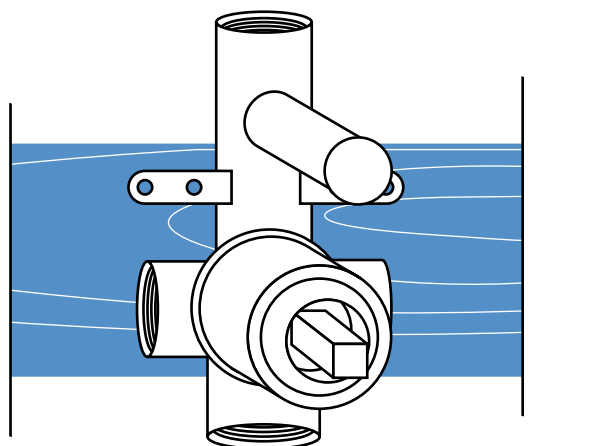


3. Connect Hot and Cold Water Lines

Connect the hot and cold water lines. The valve indicates which inlet is for each water temperature. Be sure to pressure test the fittings before finishing the wall.

4. Finish Wall

Close the wall and finish with desired exterior. Don't forget to measure and cut holes for valve, shower arm, and hand shower water connection if using acrylic panels.

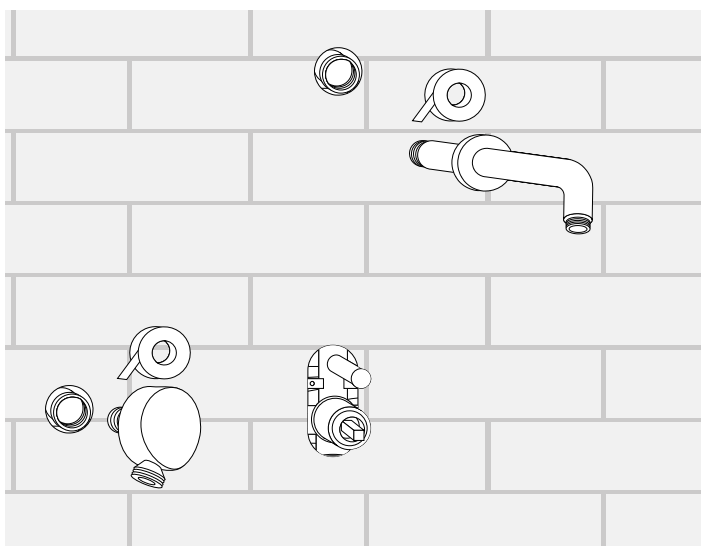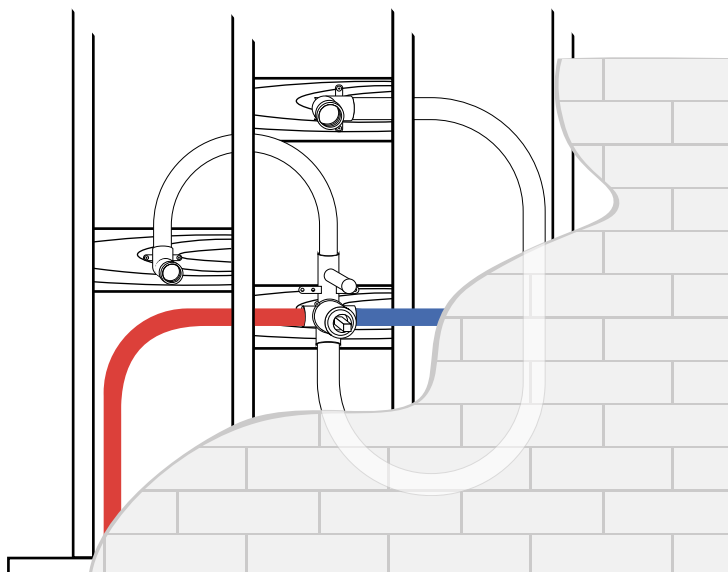


5. Install Shower Arm and Water Outlet

Slide on the shower arm plate and install arm with plumber's tape. Install water outlet with plumber's tape. **Be careful** not to cross thread pipe.


6. Install Cover Plate and Attach Handle

Install the cover plate with a bead of silicone. Attach the mixer handle to the valve. Secure firmly by tightening with allen wrench.

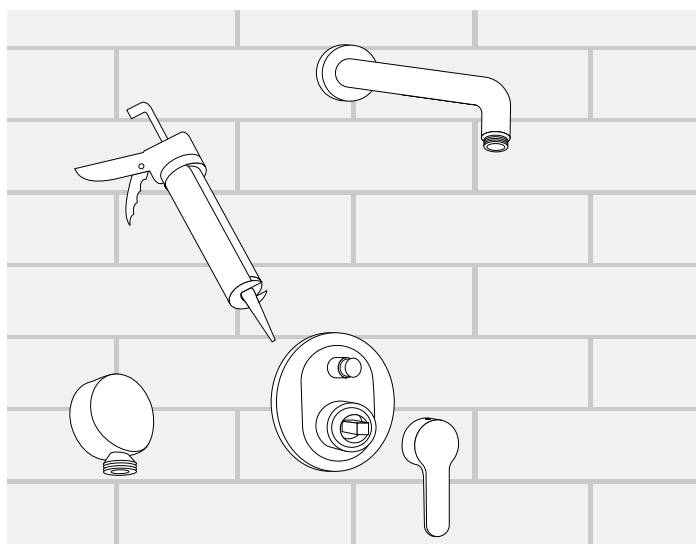


7. Attach Shower Head and Water Hose

Screw on shower head on to the shower arm with plumber's tape and tighten with wrench. **Be careful** not to cross thread pipe.

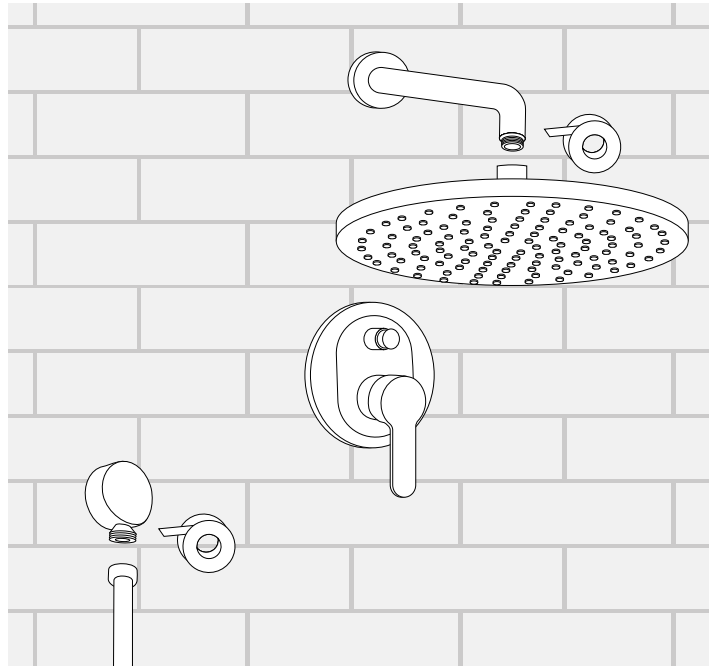

8. Install Hand Shower Bracket


Install hand shower bracket to the wall. Screw hand shower onto shower hose using plumber's tape. **Be careful** not to cross thread pipe.

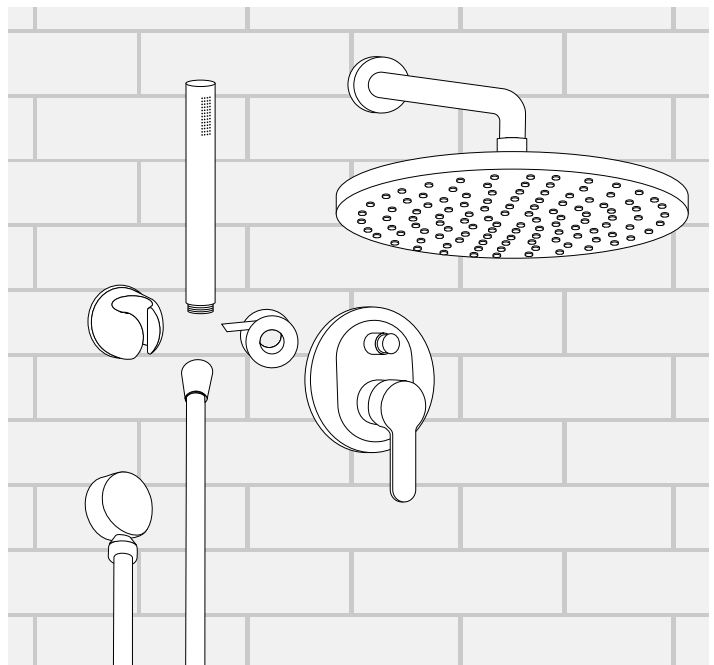


9. Shower Accessories

Complete your installation by adding the preferred shower accessories; shower basket, wire soap dish, and train rack.


shower basket



wire soap dish



train rack

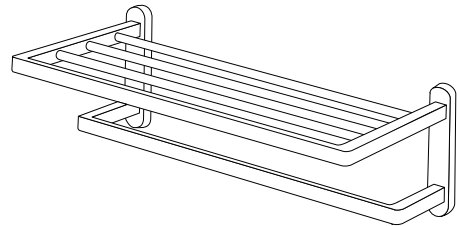

General Information

All products manufactured and supplied by Fontana are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.

Care & Cleaning

1. The product can be cleaned with warm water, a mild soap and a clean soft cloth.
2. Clean progressively and gently.
3. It is not required to use any abrasive cleaning pads, wire wool or cloths to clean the product.
4. Avoid a vigorous cleaning action, as this could contribute to denaturing and dulling
5. Abrasive or strong cleaning products containing ammonia, bleaches, alcohol, dyes, acids (hydrochloric, formic, phosphorus, chlorine or acetic) will be not be affected.
6. If using a spray cleaner, apply the cleaning agent onto a soft cloth, never directly spray onto the product as the cleaner may enter gaps and openings and cause damage. Do not allow the cleaner to remain on the product for a period of time. After cleaning, rinse thoroughly with clean water.

