

CHROME POLISHED LED THERMOSTATIC CEILING MOUNT RAINFALL SHOWER SYSTEM WITH HAND SHOWER AND JETTED BODY SPRAYS **INSTALLATION INSTRUCTIONS**



PRIOR TO INSTALLATION


Please read installation instructions below. All plumbing should be installed in accordance with applicable building codes and regulations.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

All products must be installed by a professional and certified plumber otherwise warranty may be voided.

POSSIBLE TOOLS REQUIRED*


Fontana(Showers

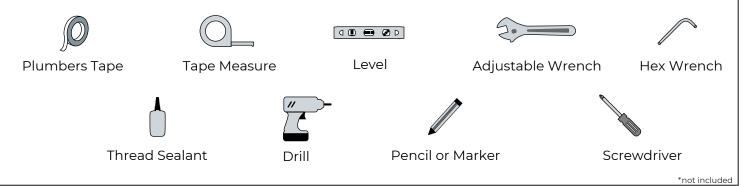




Shower Head Installation Instructions

Parts:

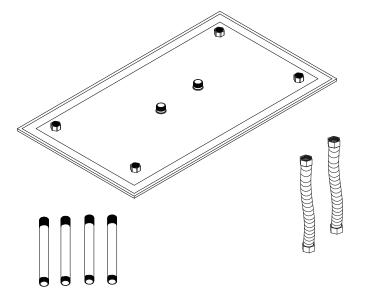


Step 1:

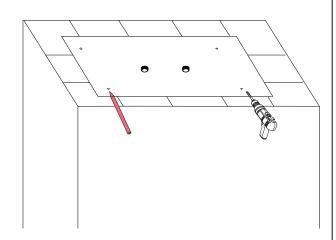

Mark the 4 drilling positions then use the Ø6 mm drill to drill holes on the wall according to the marked hole position.

Step 3:

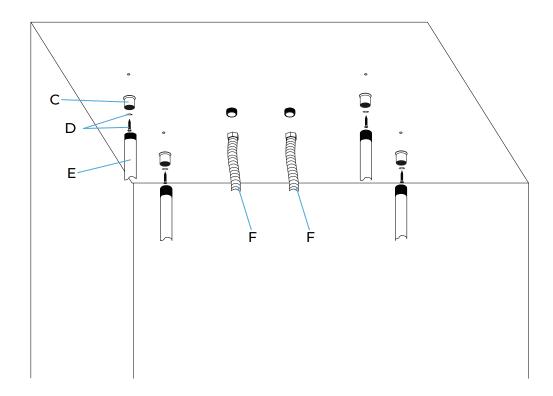


Inset the plug(D) into the hole, hold the fix base (C) use the tapping screw (D) through fix base(C) holes, tighten the tapping screw (D) tighten the top shower fixed bar(E) and the inlet hose (F) with the fix base (C)




Fontana Showers®

Step 5:

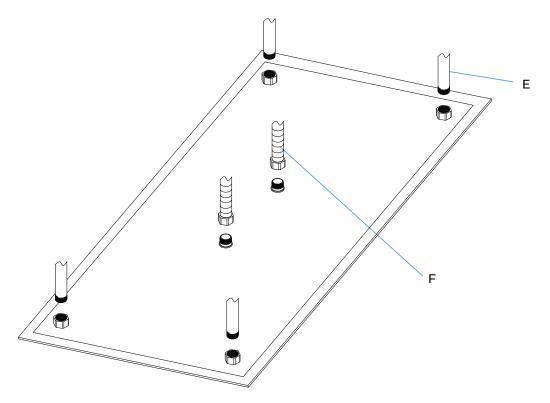

Fixed the top shower with the top shower fixed bar (E), then connect with the inlet hose (F). 2 water inlets for rainfall are provided in big shower heads so the water disperses equally throughout the showerhead.

Step 6:

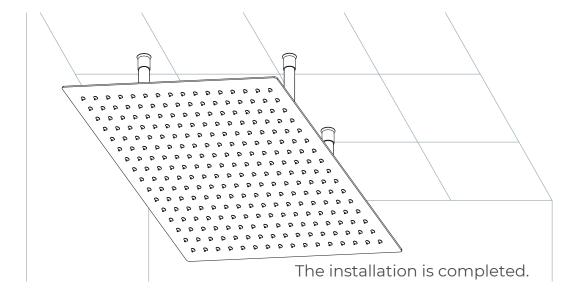

(If you have opted for LED option)

The LED light will change its color by detecting water temperature:


0-30°C (32-86°F): Blue LED 30-40°C (86-104°F): Green LED 40-50°C (104-122°F): Red LED 50-100°C (122-212°F): Flashing Red LED

Note: The LED lights are powered by water flow, and will be activated once the water is turned on.




Body Jets Spray Installations Instruction

Step 1:

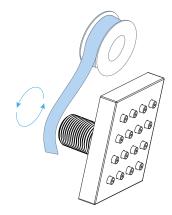

Apply teflon tape to threaded tail pipe of the body spray.


Step 3:

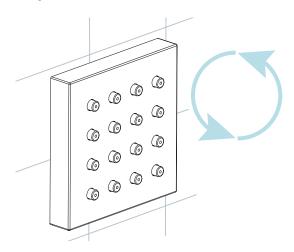

Screw the Body spray tightly into the female of water Supply.


Pressure Balancing Loop:


- If installing bodysprays in a bank of 3 or fewer, a pressure balancing loop is not necessary.
- If installing bodysprays in a bank of 4 or greater, a pressure balancing loop must be used to keep the pressure even between the bodysprays.

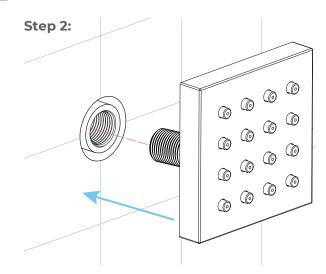

Press the escutcheon against the finished wall.

Step 4:

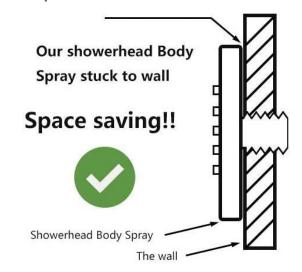

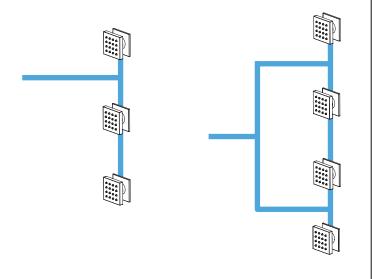







Spout Installation Instructions

Step 1

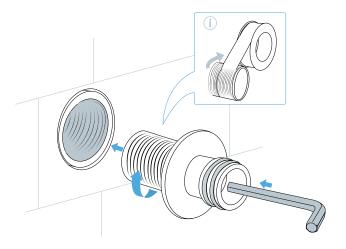


Step 2

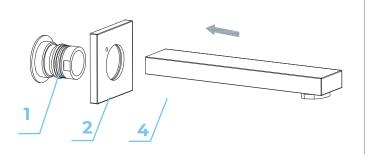

Put the decorative plate (2) through the connecting core (1) (4), then install the spout.

Step 3

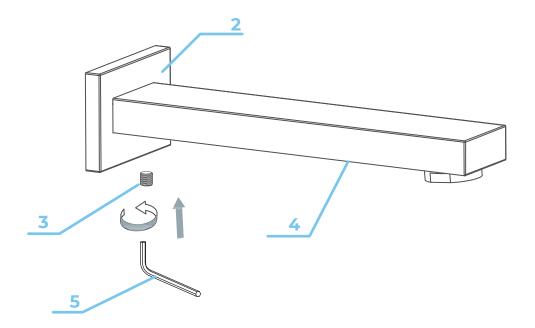



Adjust direction of decorative plate (2) and spout (4), Fix the screw (3) with allen key (5). Finally, turn on the water and check for leaks. When testing is complete, turn off the water to finish Installation.


Fontana Showers 6-

Mixer Installations Instructions




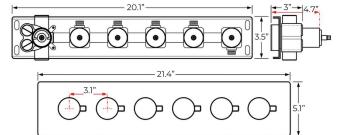

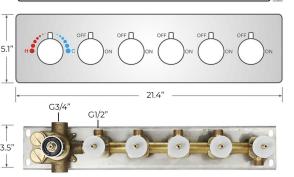


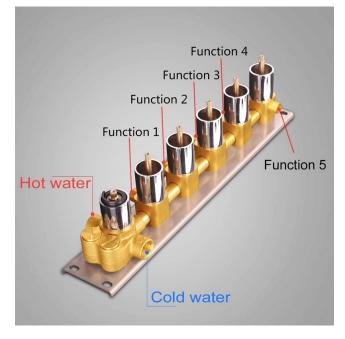




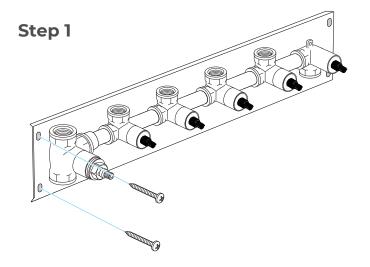


Step 2

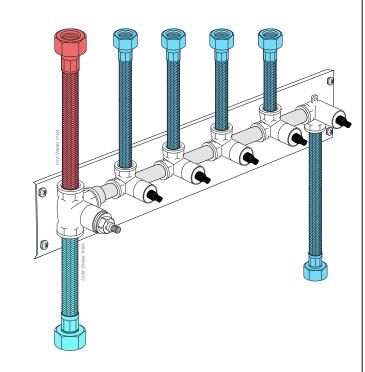

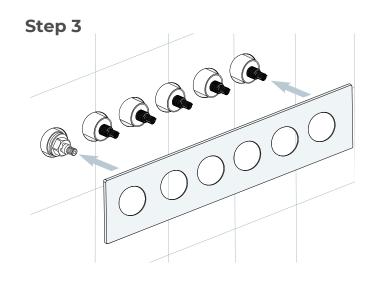


Fontana Showers 6


Step 4

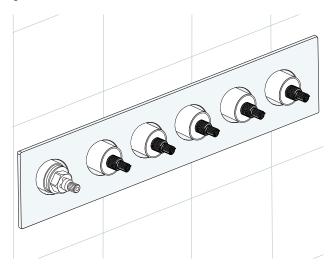

Step 5

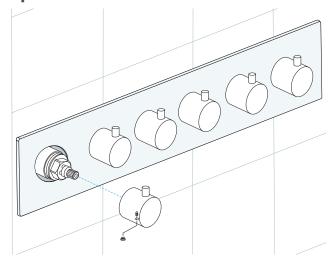

Step 6

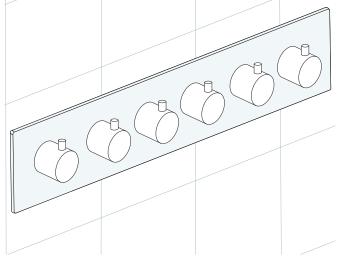

- Release handwheel levers according to the directions.
- Take apart the embed valve, panel, and handwheel.
- Dig the embed space for the pipe on the wall according to the valve.
- Dig holes according to the position of the screws.
- Use a hammer to thwack the screws into holes.
- Fix the valve body with screws.
- Find out the expansion screw heads with washer and spring washer. Use copper sleeve wrench to lock the screw heads with the embed valve body.
- After connecting all the pipes and before sealing the wall wi

leaking problem occur when you turn on the water.

- Fix the decorative panel on the embedded valve body.
- Screw the handwheel arms with the handwheels





General Information

All products manufactured and supplied by Fontana are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.

Care & Cleaning

- 1. The product can be cleaned with warm water, a mild soap and a clean soft cloth.
- 2. Clean progressively and gently.
- 3. It is not required to use any abrasive cleaning pads, wire wool or cloths to clean the product.
- 4. Avoid a vigorous cleaning action, as this could contribute to denaturing and dulling
- 5. Abrasive or strong cleaning products containing ammonia, bleaches, alcohol, dyes, acids (hydrochloric, formic, phosphorus, chlorine or acetic) will be not be affected.
- 6. If using a spray cleaner, apply the cleaning agent onto a soft cloth, never directly spray onto the product as the cleaner may enter gaps and openings and cause damage. Do not allow the cleaner to remain on the product for a period of time. After cleaning, rinse thoroughly with clean water.

