

Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower

Product Code: FS-5925



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker



Screwdriver


*not included

Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower

Product Code: FS-5925


Shower Head Installation Instructions:

Step 1:

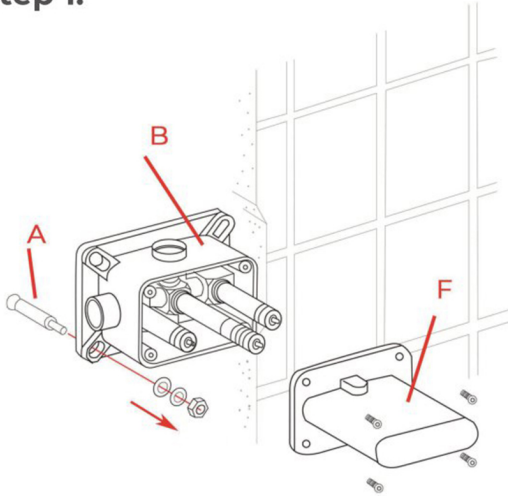


Remove the protective cover (F). Mark the positions and drill holes to suit the anchors (A). Install the anchors (A) and fix the rough-in valve (B) into the wall with screws. Use a level to ensure that the rough-in valve (B) is straight and level. (Important: Flush the water supply to remove any dirt and debris before installing the valve body).

Step 2:

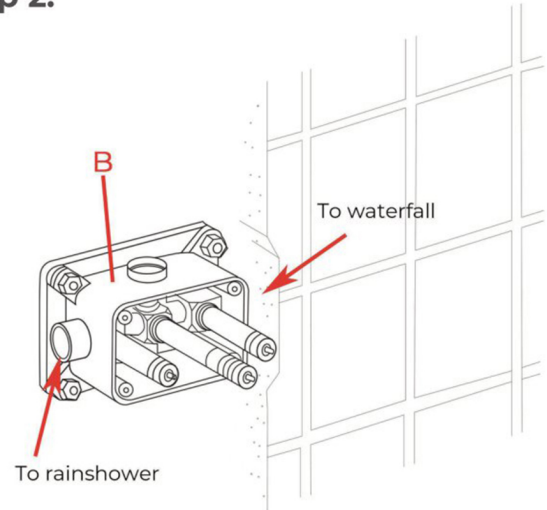


Wrap Teflon tape around the pipe threads and connect water supply lines and in-wall pipes (not included) as desired to the rough-in valve (B). Turn on the water supply and open the cartridge to check for leakage. Then put on the protective cover and finish the wall surrounding the valve. (Note: Test the water pressure after the pipe connections have been made and before the finished wall material is installed).

Step 3:

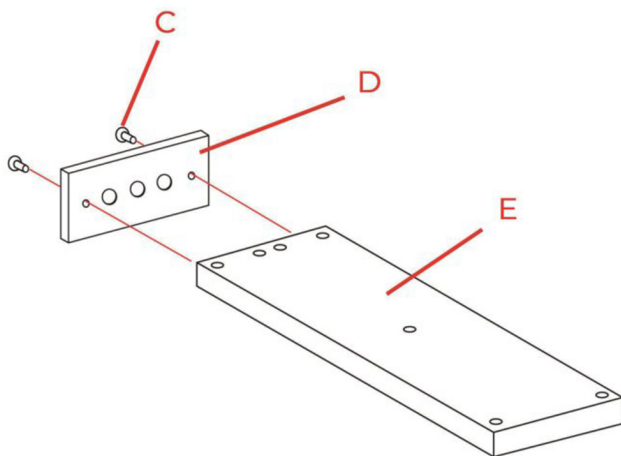

Fix the escutcheon (D) to the showerhead (E) with screws (C).

Step 4:

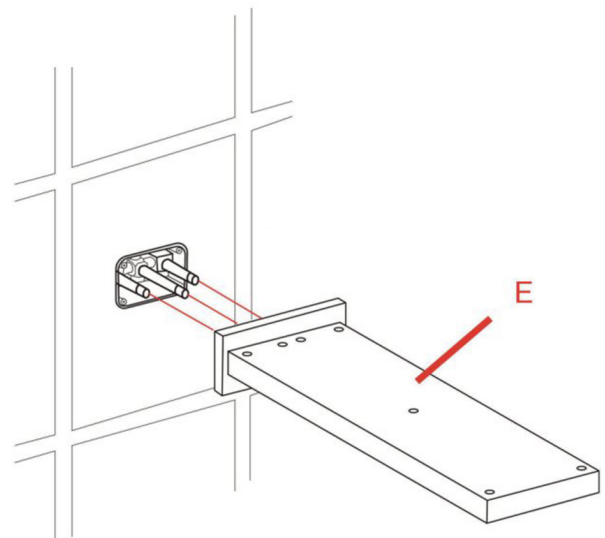

Remove the protective cover when the finished wall is completed. Then, install the showerhead (E) and press it against the finished wall.

FONTANA SHOWERS

Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower

Product Code: FS-5925



Support role ,strong safe

Rainfall outlet role

Rain shower outlet role

- Big water flow and comfortable spay,
Elegant design and save space of
shower room



The installation of concealed plastic box
in right way



It's installed
upside down


The installation of concealed plastic box
in wrong way

Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower


Product Code: FS-5925

Mixer Installation Instructions:

Step 1

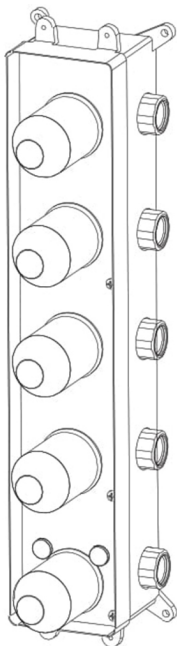


Step 2

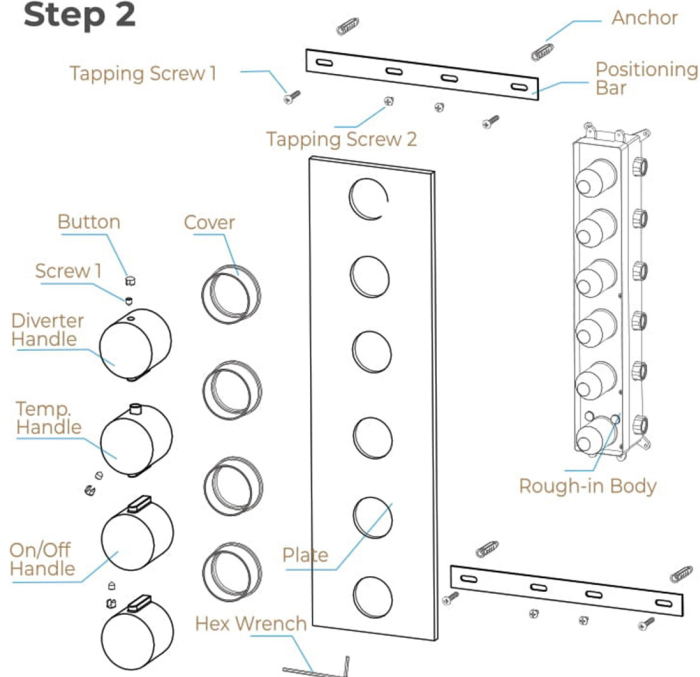

Step 3 (Connection)

Hot water
Cold water

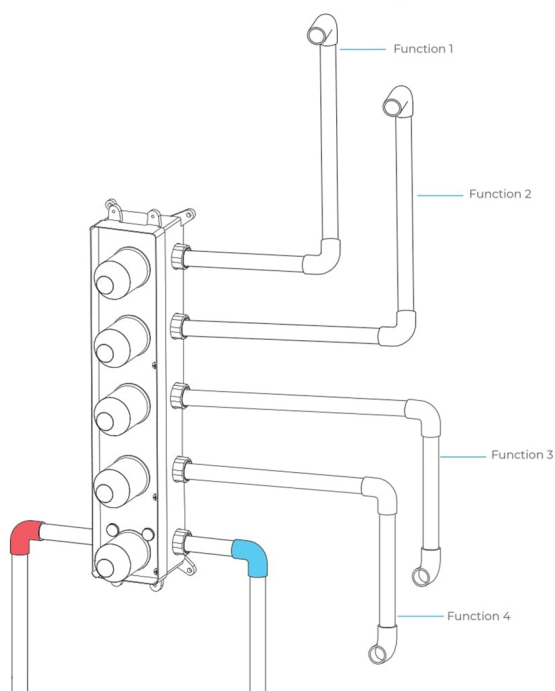


Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower


Product Code: FS-5925

Body Jets Installation Instructions:


Step: 1

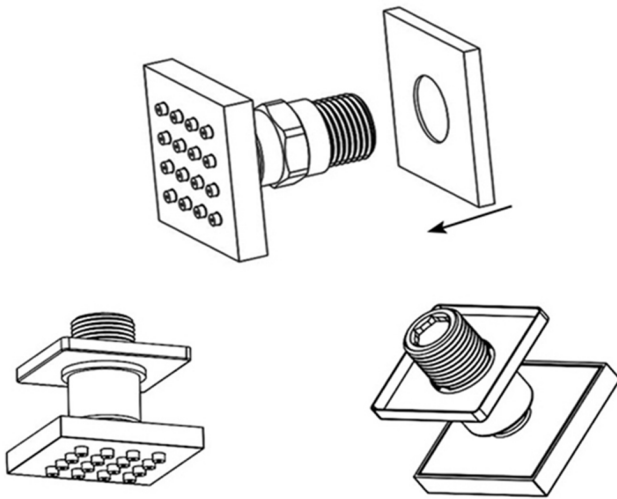


Step: 2

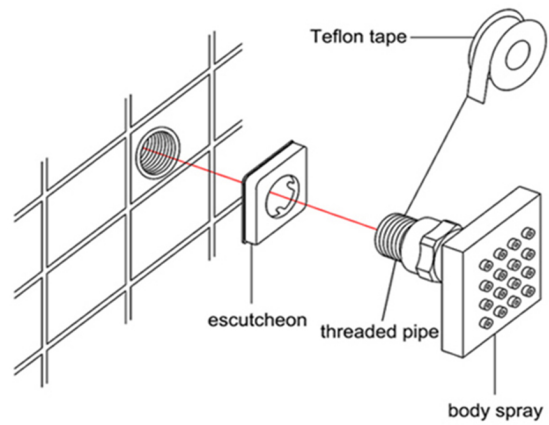

Step: 3

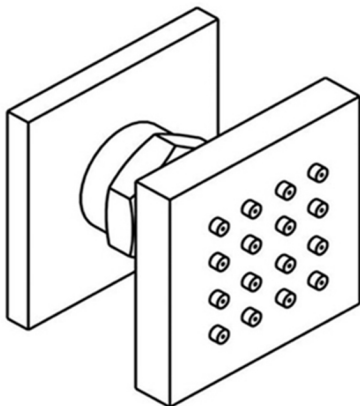

Step: 4

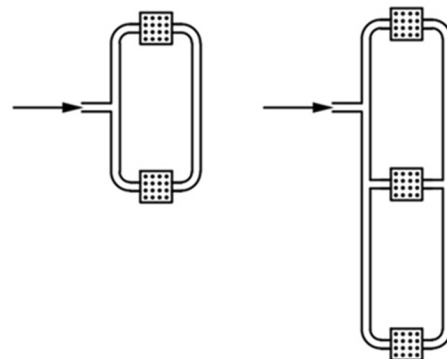


Fontana Mugla 22" LED Thermostatic Waterfall Rain Shower Head with Massage Body Sprays and Hand Shower


Product Code: FS-5925

Hand Shower Installation Instructions:


Step 1:

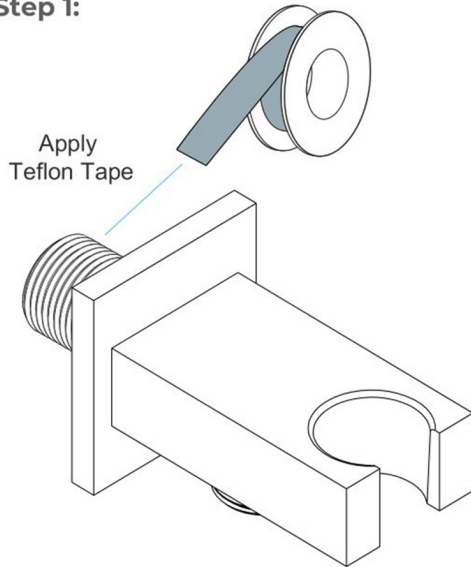


Step 2:

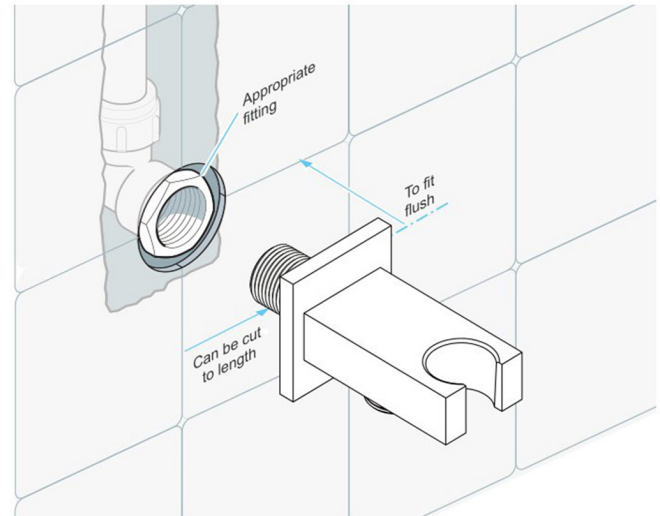

Step 3:

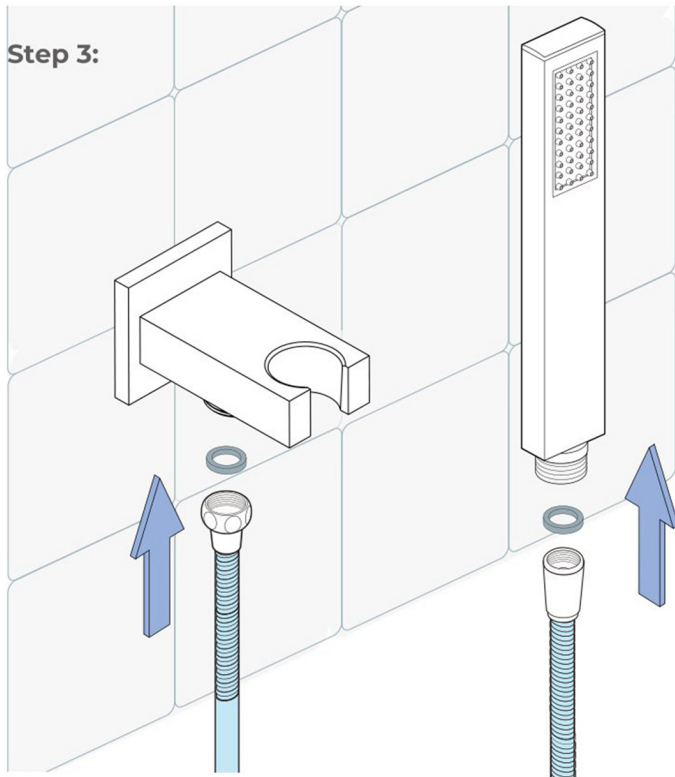

Step 4:

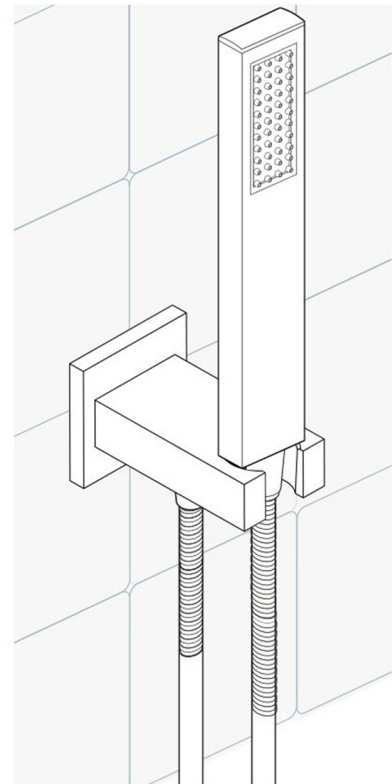

Hand Shower Outlet Installation

• Complete the outlet pipework ensuring it ends in an appropriate 15mm x 1/2" BSP female thread elbow.

Note: This fitting is not supplied as variations in installations require the selection of a suitable solder or compression fitting.

• Install the 'Wall Outlet', thread long male 1/2" BSP into the appropriate female fitting using PTFE tape to give a watertight joint.

Note: The thread can be cut to size if required. Make sure that all debris is removed from the connector and the section that has been cut is dressed correctly, before installation.