

Fontana St. Gallen Matte Black Finish Floor Standing Bathtub Faucet Single Handle with Hand Shower

Product Code: FS1384ORB



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver

*not included


Installation Instructions:

Step 1:

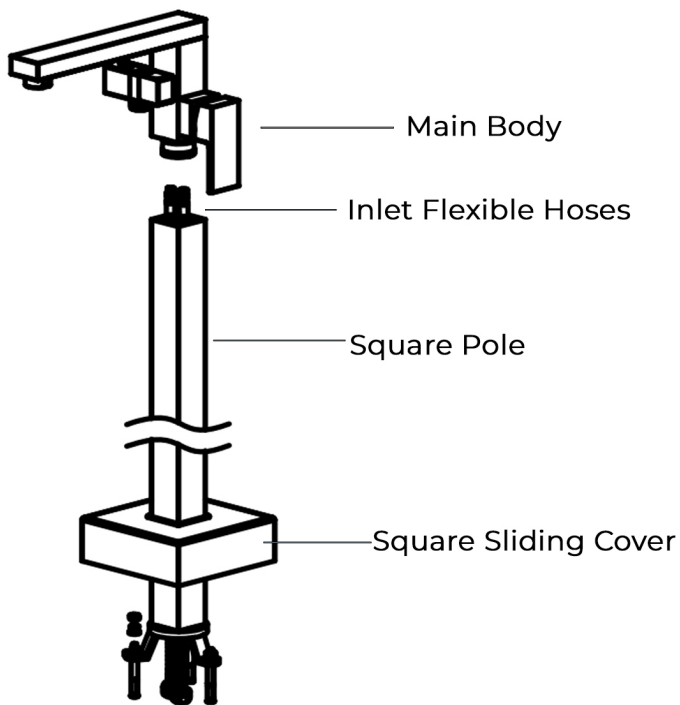


Insert the flexible hoses throw the square pole and assembling them to main body turning by hand.

Step 2:

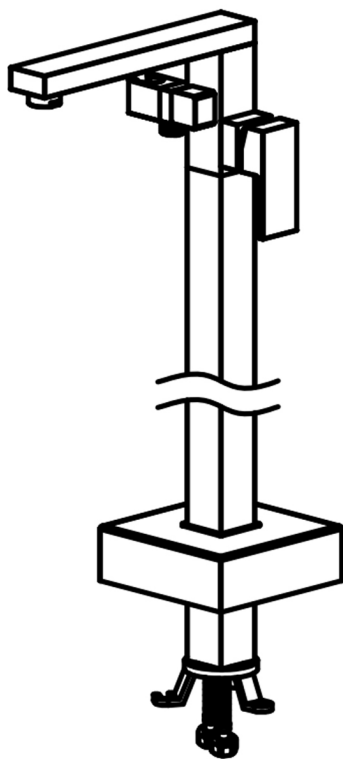


Match the square pole with the main body,fix together turning the 2 screws on rear with the key .

Step 3:

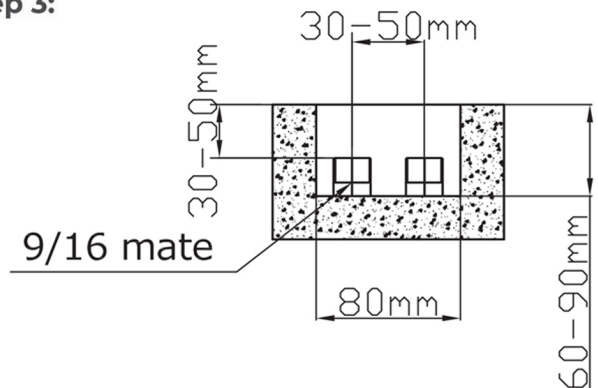


Create a chamber in the floor following the above measure with 9/16 male connectors for water net.

Step 4:

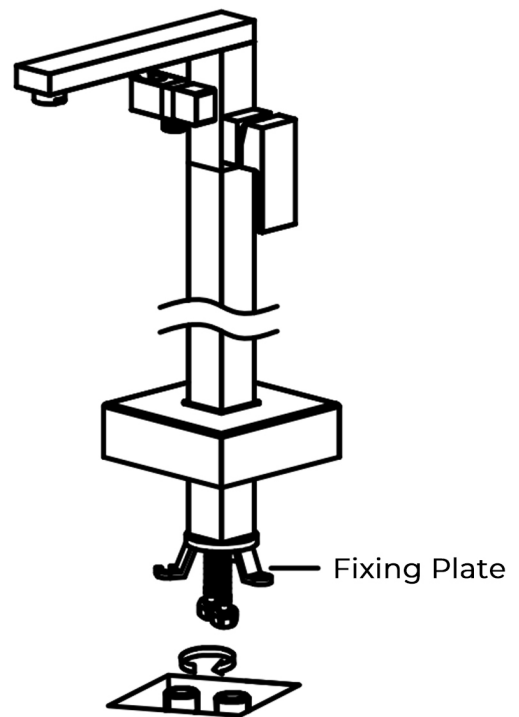

Insert the sliding cover on square pole, insert the flexible hose'snuts throw the fixing base and connect the G 1/2 nuts with the water net connectors fixing tight by key .

Step 5:

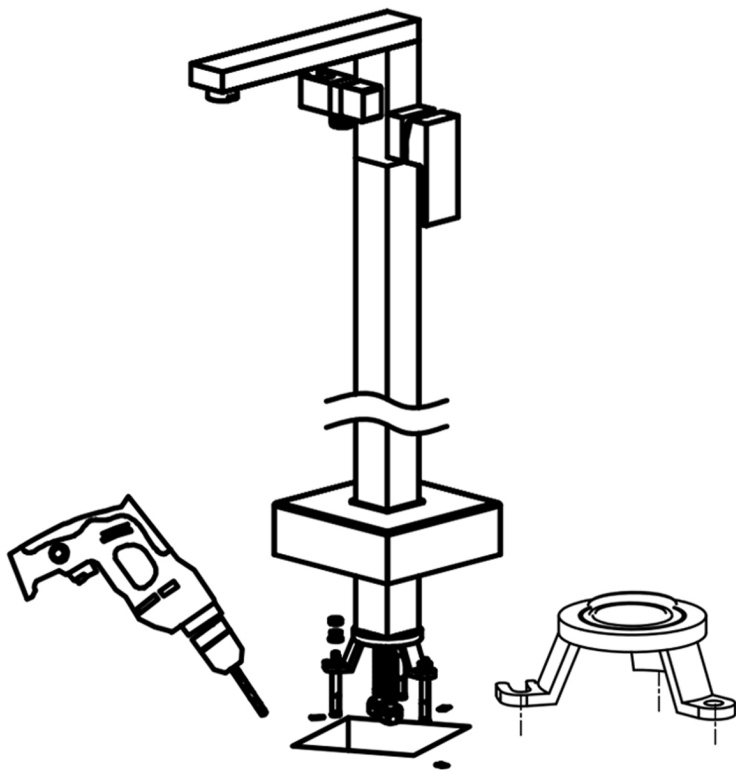

Adjust the complete to get correct position, then drill to fix baseplate.

- Always wipe your fixture down with a soft cloth after each use to prevent mineral build-up and water-spotting. Should spotting occur, remove water spots with warm water and a soft, damp cloth.

- Wipe away any debris adhering to the spout or sensor.

- Wipe away debris with a damp cloth containing a suitable amount of a neutral, dishwashing detergent. Then wipe clean with a damp cloth.

- Do not use detergent that might damage the surface of spout. These include:


- Detergents containing acid, chlorine bleach or alkali.

- Detergents that are coarse granules in nature, such as polishing powder.

- Solvents such as paint thinner or benzene.

- Abrasive aids such as nylon scrubbers/brushes, steel wool, etc.

Step 6:

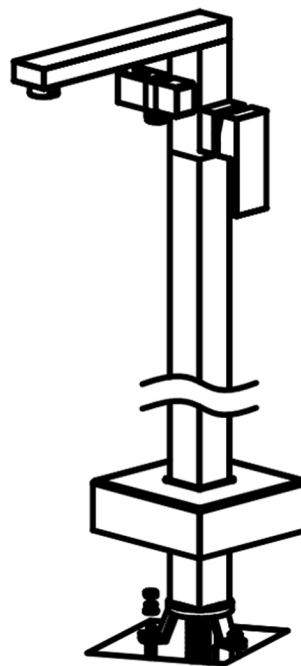

Insert the fixing bolts and fix tight in the floor. Move the cover to hide the base.

