



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker



Screwdriver

*not included

Installation steps:



To ensure smooth drainage, the floor drain must be installed at the lowest point of the entire decorated floor.

The reserved height of the drain pipe should be determined according to its diameter and the expected height of the finished ground.

According to the determined installation height, align and install the floor drain. Fill the surrounding gaps with cement.

Drill holes in the ground swivel as shown in the figure and install the ground swivel.

Fill the gap between the floor drain and the tile with cement and remove any excess cement.

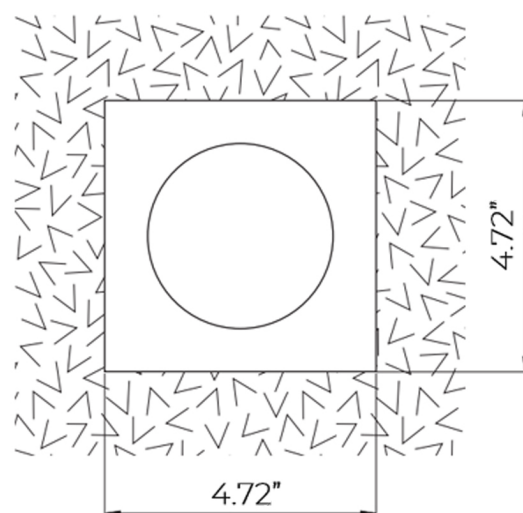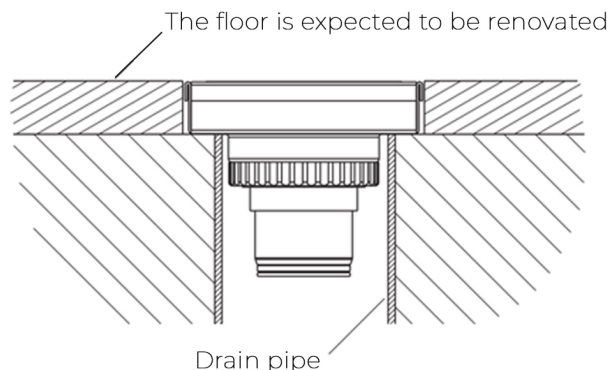

Cleaning instructions:

Applicable to all processed surfaces: clean the plated surface with neutral soapy water, and then wipe the entire surface thoroughly with a clean soft cloth. Many cleaning agents, such as ammonia, scouring powder and toilet cleaner, will damage the electroplated surface and should not be used.

Abrasive cleaning tools or detergents should not be used on Kohler faucets and their accessories.