



BEFORE YOU BEGIN


Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*

- 

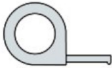Plumbers Tape
- 

Tape Measure
- 

Level
- 

Adjustable Wrench
- 

Hex Wrench
- 

Thread Sealant
- 

Drill
- 

Pencil or Marker
- 

Screwdriver


*not included

Fontana Arcos Luxury Champagne Finish LED Musical Shower Set


Product Code: FS5545-CP

Ceiling Mount Shower Installation Instructions:


Step 1:

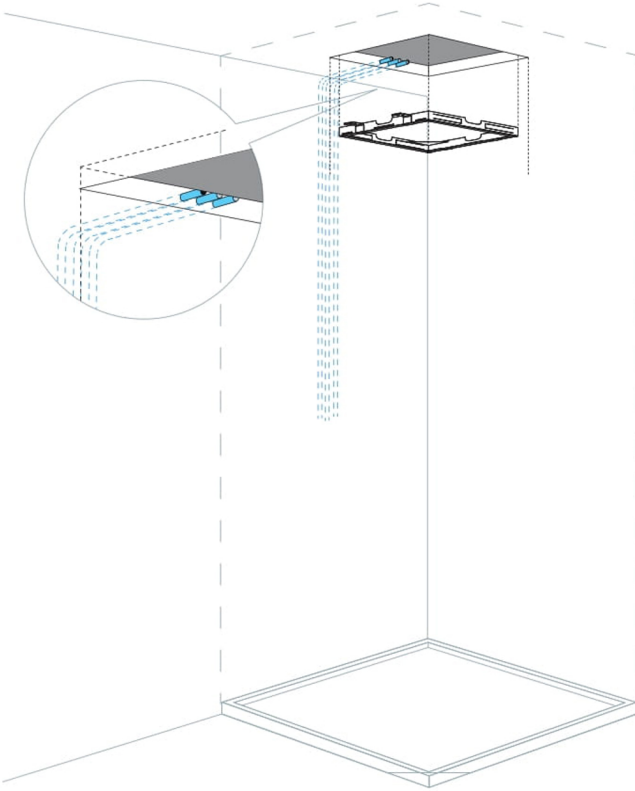


Step 2:

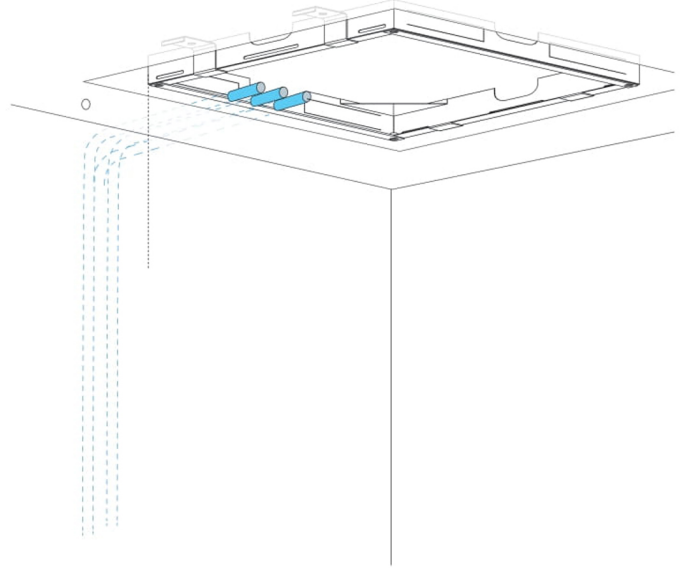

Step 3:

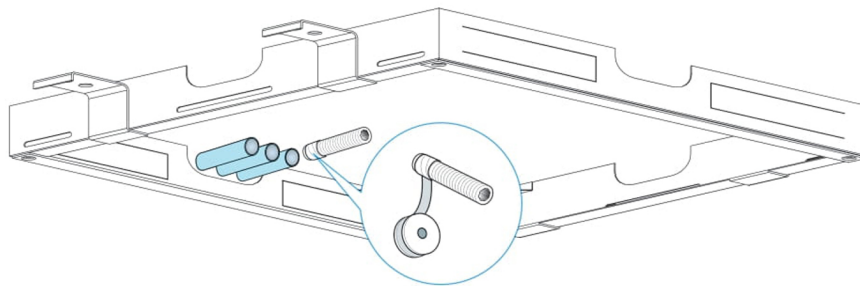


Step 4:

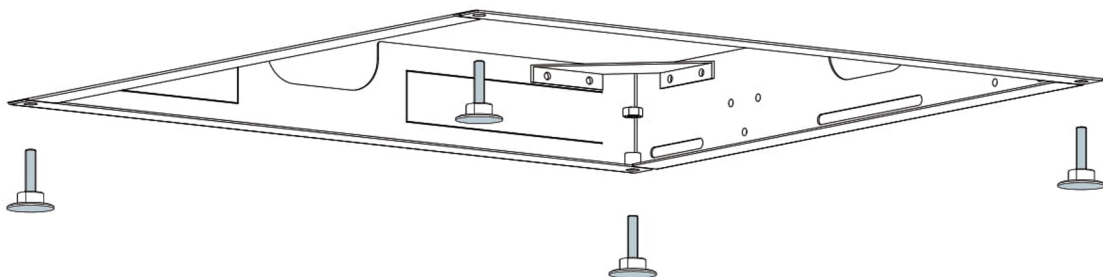


Fontana Arcos Luxury Champagne Finish LED Musical Shower Set

Product Code: FS5545-CP


Step 5:

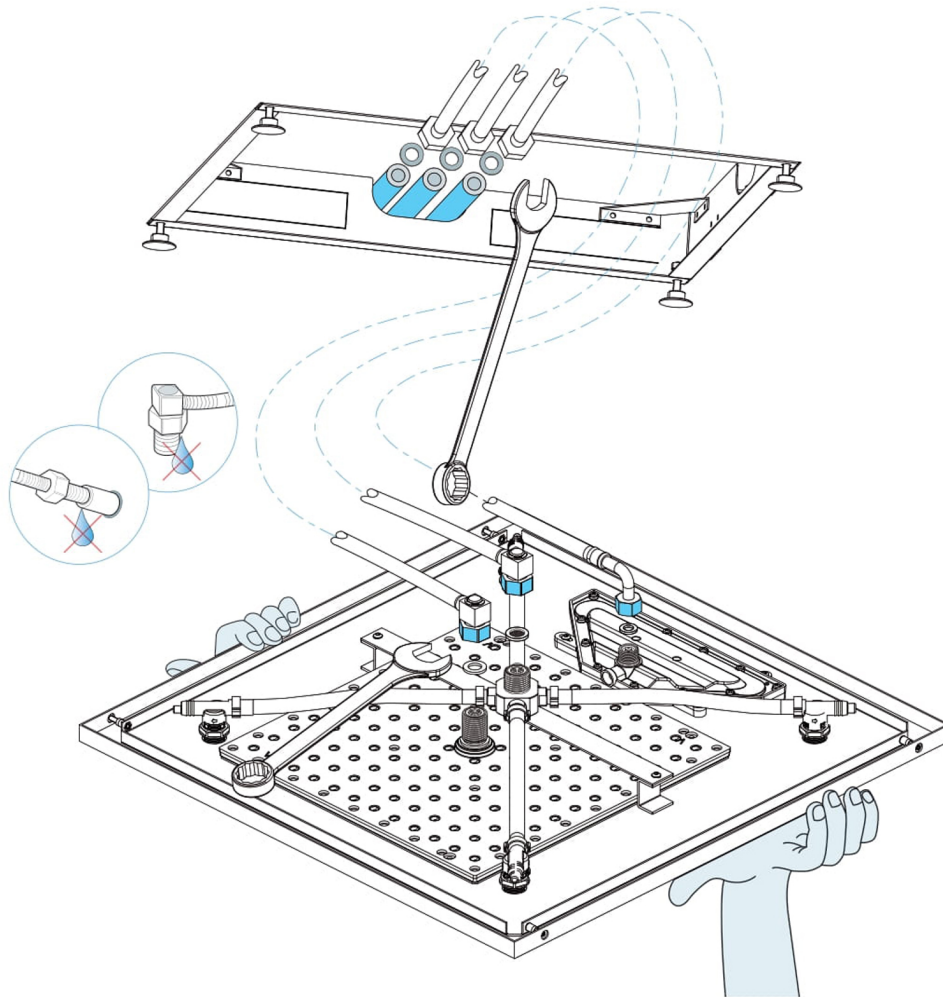


Step 6:

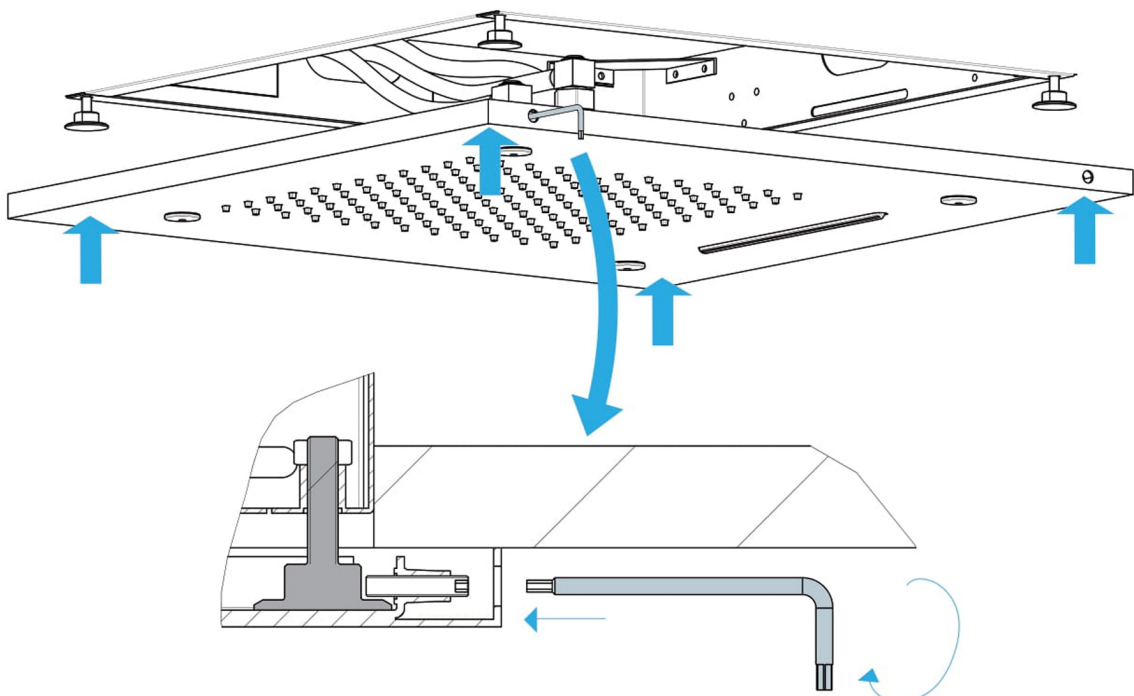


Step 7:

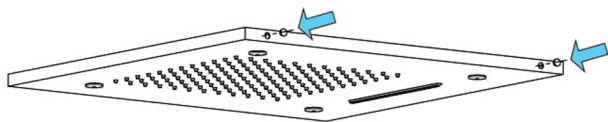


Step 8:

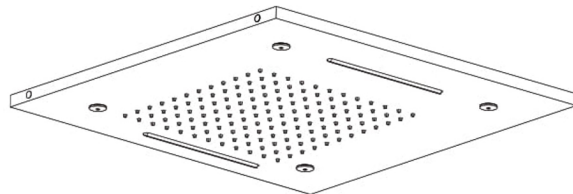


Step 9:

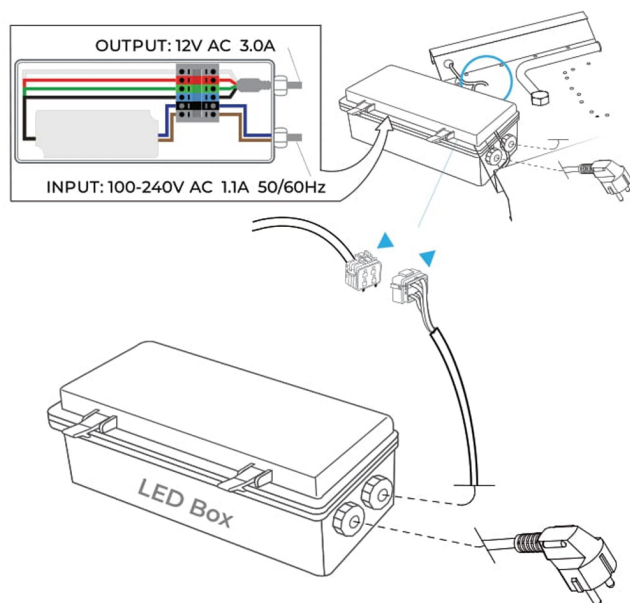

Step 10:


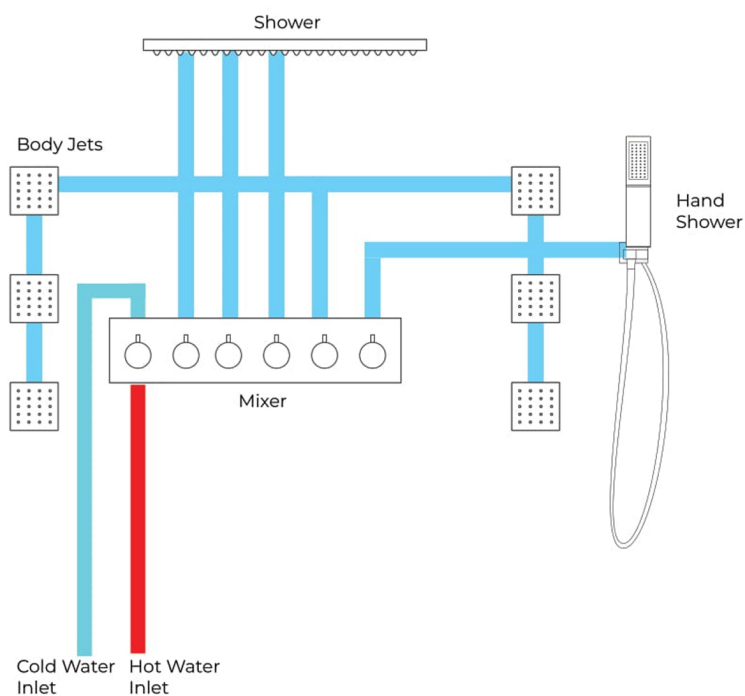


Installation Depth Of Main Body:




dividing water handwheel

1 31/32"(50mm)min **Tile wall**

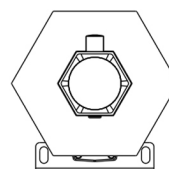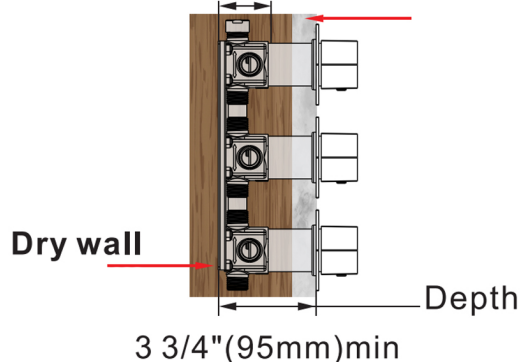


constant temperature handwheel

3 1/8"(80mm)min **Tile wall**

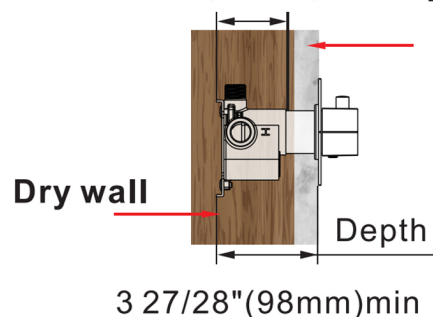

- Notice:**
1. The installation depth of the main body should be no less than 3 1/8" (80mm) and no more than 3 27/28" (98mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
 2. The installation depth of the dividing water handwheel should be no less than 1 31/32" (50mm) and no more than 3 3/4" (95mm), including the thickness of the tile. Otherwise, the deck plate cannot be installed.
 3. The opening size of ceramic tile shall be smaller than the deck plate size.

Piping Instructions Before Tiling:

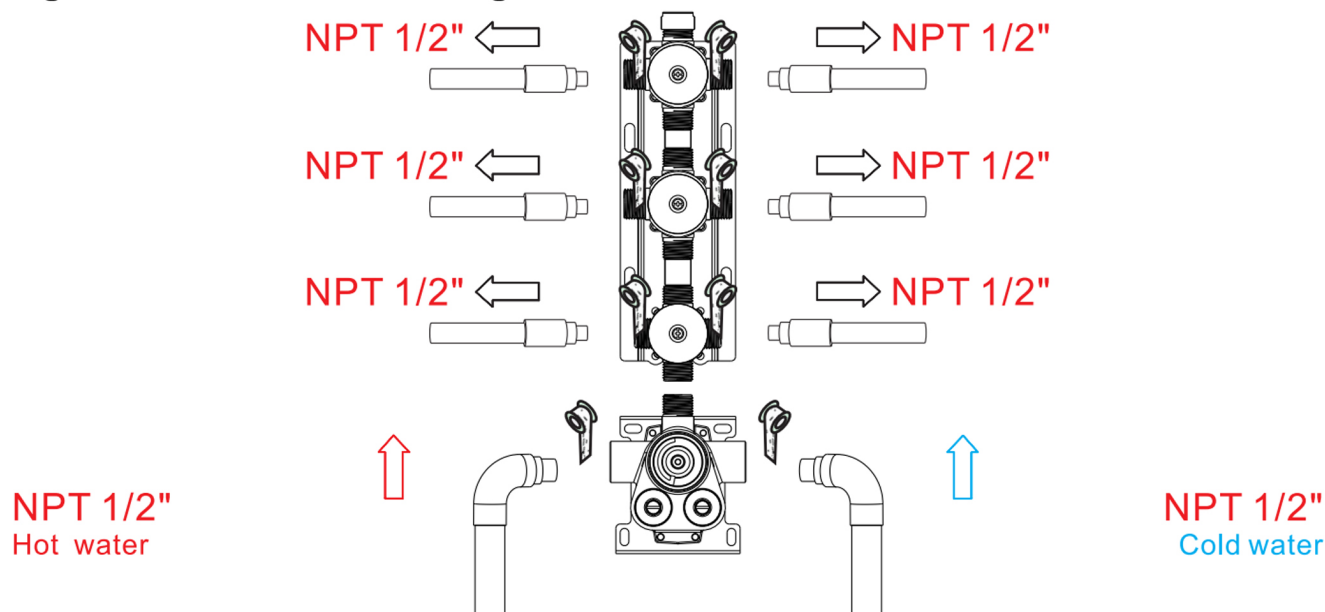


1. As shown in the figure, the inlet and outlet pipes are pre-buried. Please pay attention to the correct direction of installing the pre-buried main body.
2. Install the hot and cold water inlet pipes and three mixed water outlet pipes connected to shower head, hand shower holder and body jet pipes separately.
3. Before tiling, turn on the water to test whether the left and right inlet pipes are tightly connected without leakage. Then, adjust the flow switch to be on to check the mixed outlet pipes for leakages.
4. The handwheel can be installed according to the customer's preference, and the DIY arrangement shape.

Fontana Arcos Luxury Champagne Finish LED Musical Shower Set

Product Code: FS5545-CP

Main Body Valve Installation:

Step 1

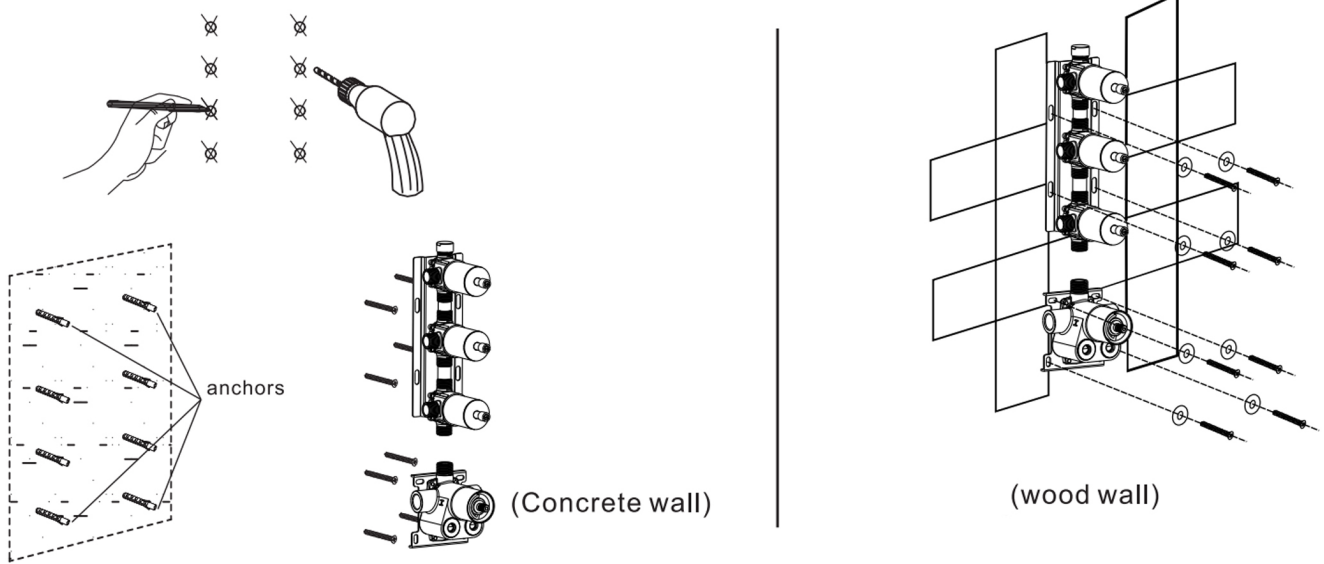


1. Make marks according to the dimensions of the main body valve, then drill anchors into the wall (for a concrete wall).

2. Secure the main body directly to a wood wall using screws.

3. When installing the main body, ensure the "UP" side is facing upwards; do not install it upside down.

Please note: The level meter should be parallel to the wall; otherwise, the deck plate cannot be installed properly.

Step 2

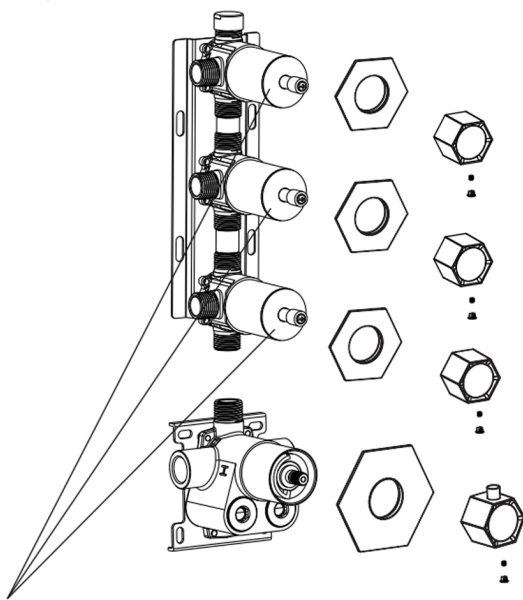


Precautions for Handwheel Installation:

1. The line can't be misplaced; it should be kept in line. Otherwise, the water temperature of 100°F or 38°C will not be correct.



2. Please ensure that the plastic locating ring (A) and handwheel locating pin (B) are kept in the same line with 100°F or 38°C. Otherwise, the water temperature will be incorrect.

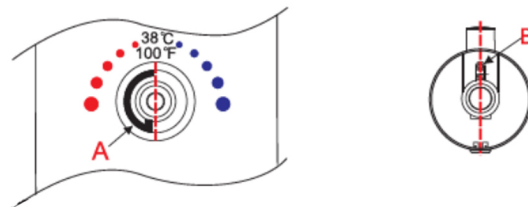





Do not remove the white wear ring; otherwise, the handwheel will be damaged.

Water flow control: Turn clockwise to decrease and stop; turn anti-clockwise to increase to the maximum

1. Please install the deck plate, water diverters, and water diverter rods step by step.

2. Install the handle using the screw provided, and then secure it with the handle cap.


Body Jets Installation Instructions:

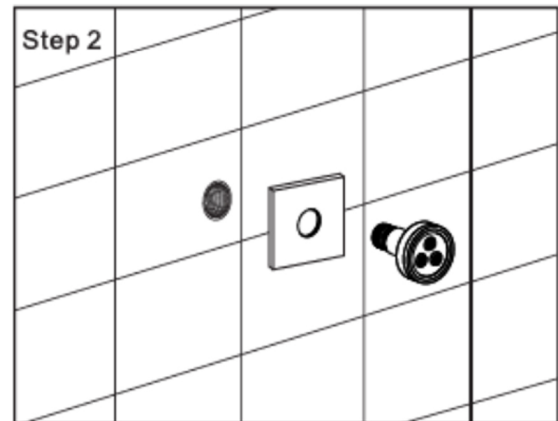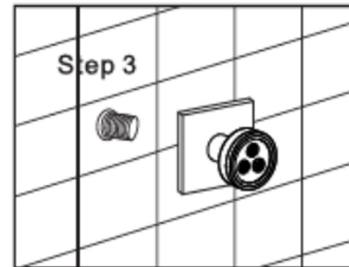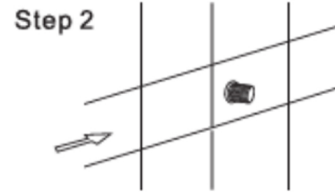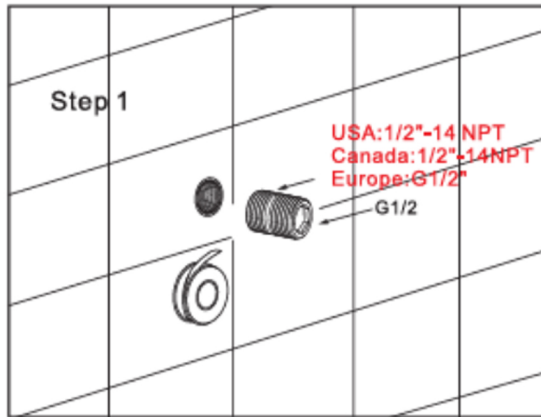


Step 1. Wrap the threaded pipe of NPT1/2 with Teflon tape and screw it into the wall.
Step 2. Cut off any excess parts using a saw.
Step 3. Screw the massage body jet onto the wall.

Hand Shower Installation Instructions:


Step 1

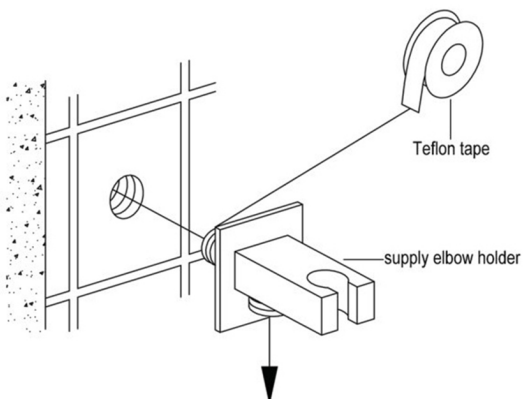


Step 2

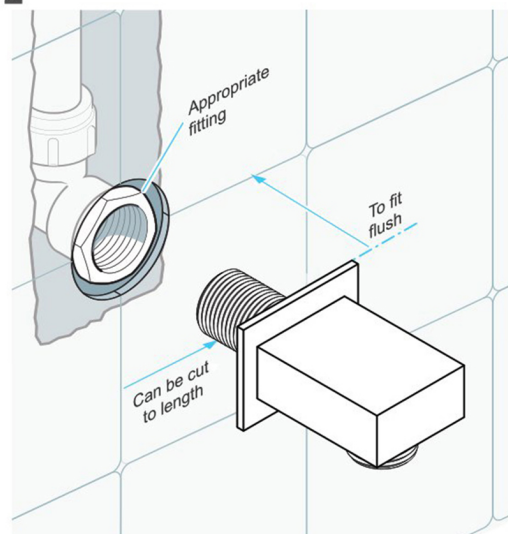

Step 3

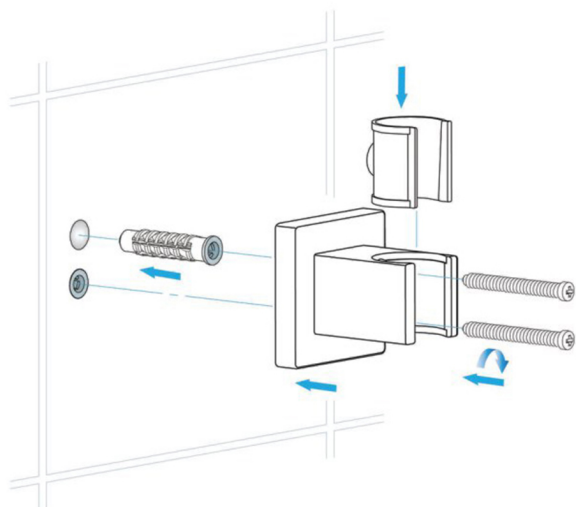

Step 4

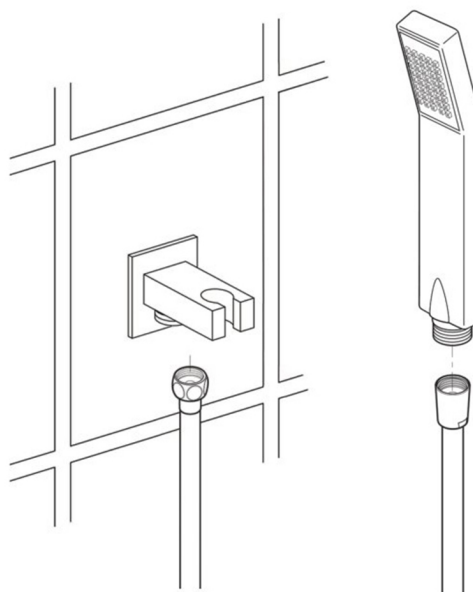

Hand Shower Outlet Installation

- Complete the outlet pipework ensuring it ends in an appropriate 15mm x 1/2" BSP female thread elbow. Note: This fitting is not supplied as variations in installations require the selection of a suitable solder or compression fitting.
- Install the 'Wall Outlet', thread long male 1/2" BSP into the appropriate female fitting using PTFE tape to give a watertight joint. Note: The thread can be cut to size if required. Make sure that all debris is removed from the connector and the section that has been cut is dressed correctly, before installation.

The minimum required water pressure is 0.05 MPa (0.5 bar).

Flow rate 2.5 GPM (9.5 LPM).