



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver


*not included

Ceiling Mount Shower Installation Instructions:


Step 1:

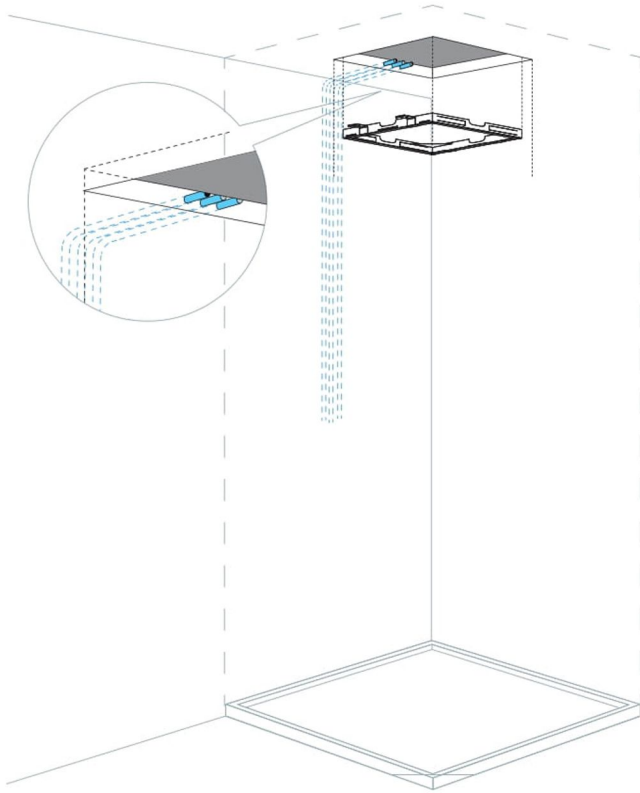


Step 2:

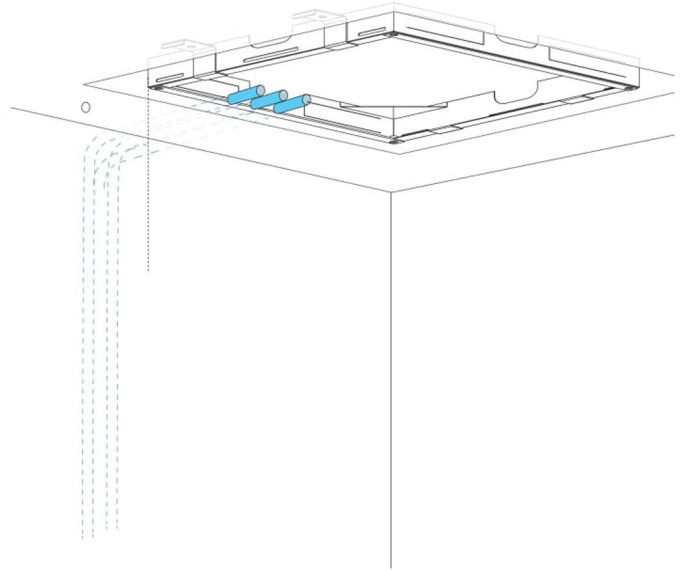

Step 3:

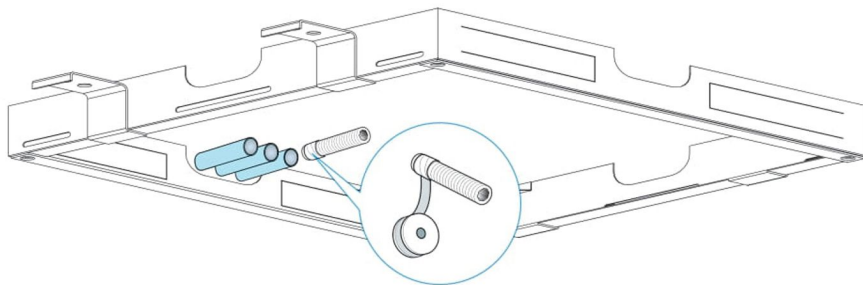


Step 4:

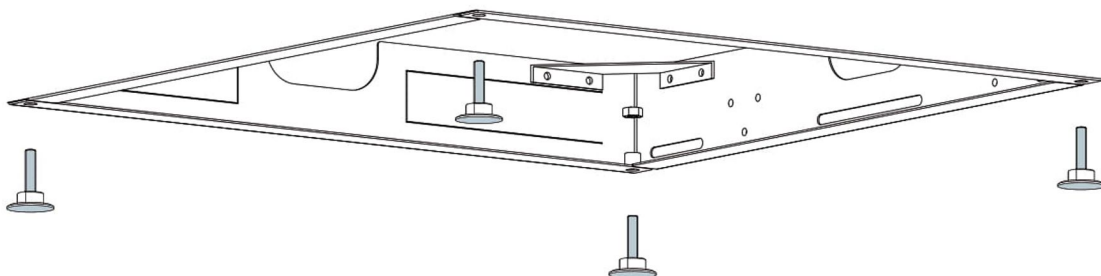


Fontana Anover Matte Black Contemporary Multi-Function Shower Set

Product Code: FS6080MB

Step 5:

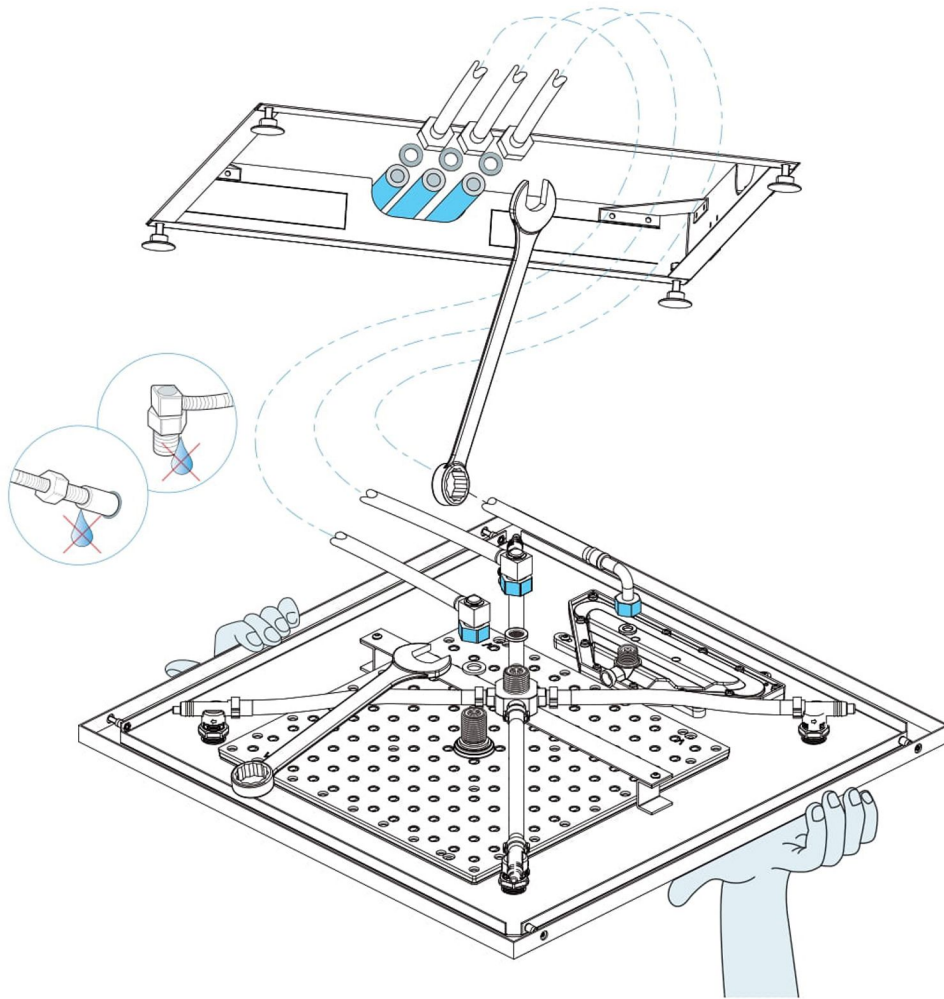


Step 6:

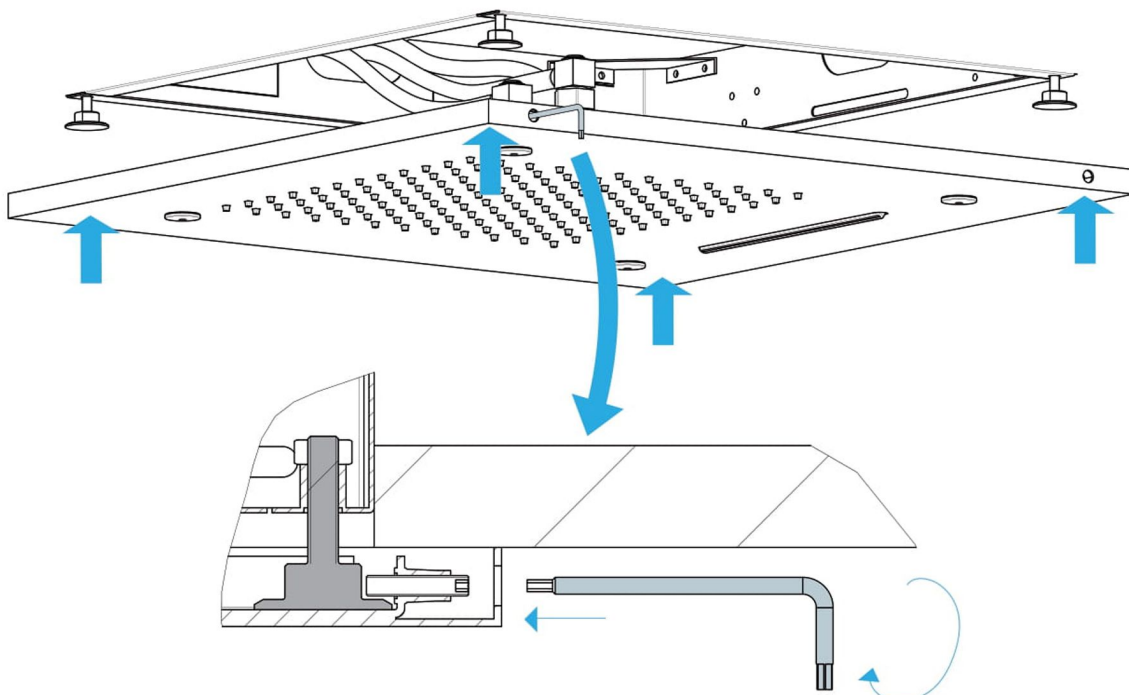


Fontana Anover Matte Black Contemporary Multi-Function Shower Set

Product Code: FS6080MB


Step 7:

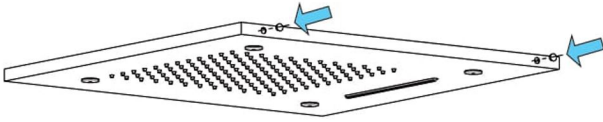

Step 8:

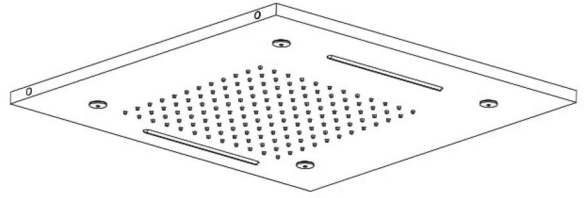

Step 9:

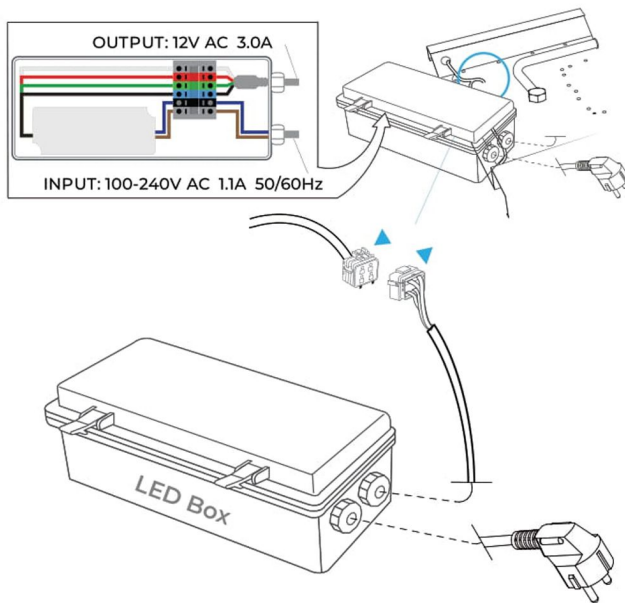


Step 10:




Mixer Installation Instructions:

Step 1:

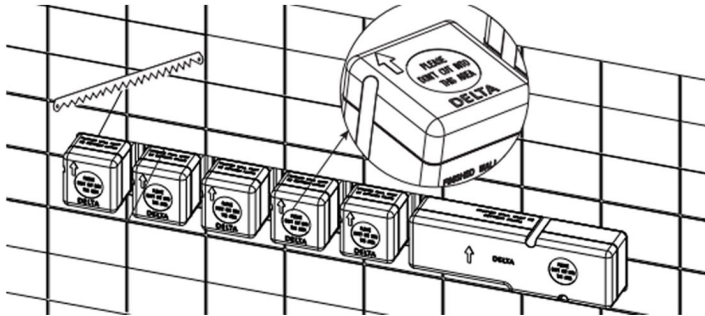


Use the saw blade to cut the rest of the protectives. Note: please don't cut the center valve guard.

Step 3:

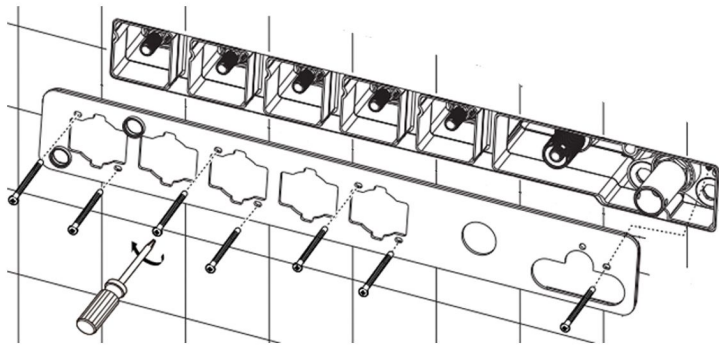


Install the back plate.

Step 5:

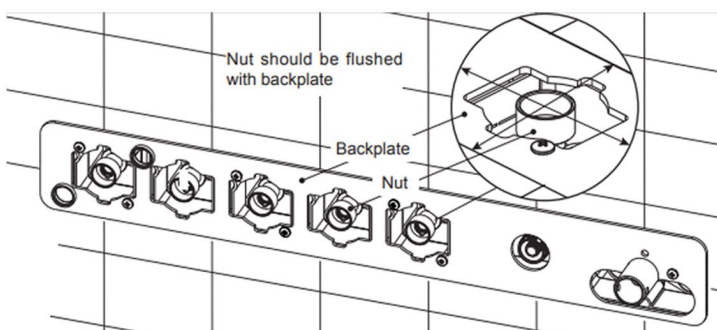


Adjust the nut end surface flush with back plate. Note: The diverter valve must be in the closed position before adjusting the nut (the lowest

Step 2:

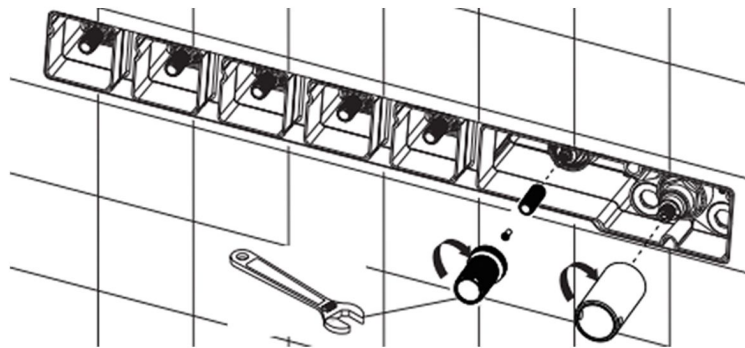


Install the extension for the volume control valve and fix the sleeve on the thermo valve.

Step 4:

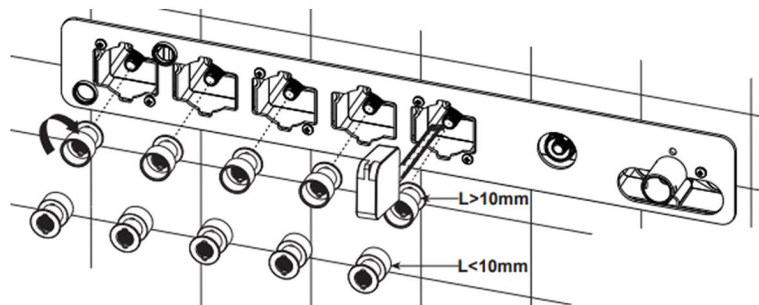

Install the adjusting nut.

Step 6:

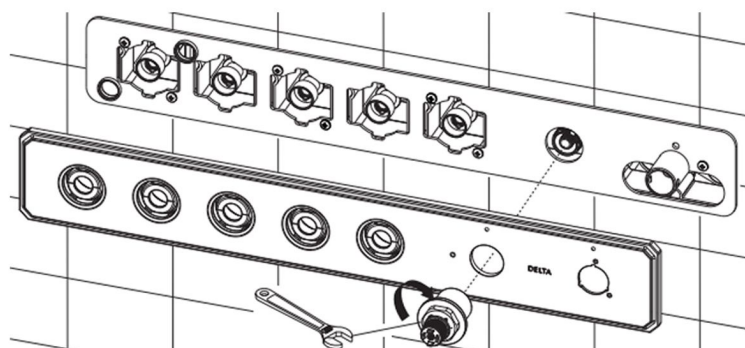


Install the cover plate kit and fasten with bonnet kit.

Fontana Anover Matte Black Contemporary Multi-Function Shower Set


Product Code: FS6080MB

Step 7:

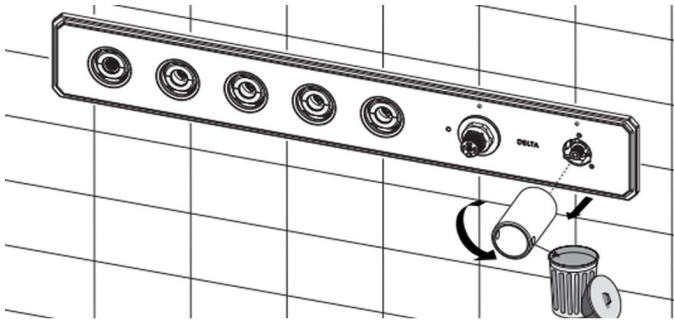


Remove the sleeve and discard.

Step 9:

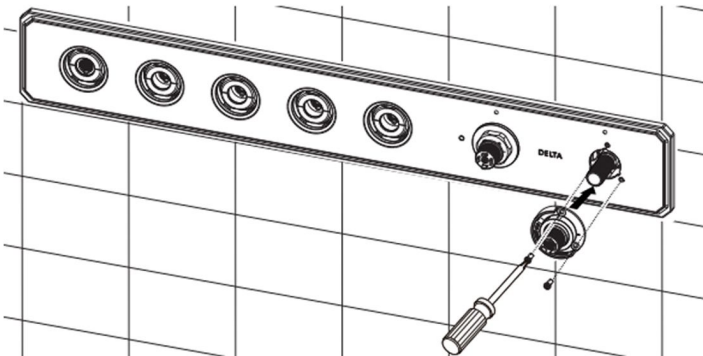


Install the thermo valve handle base kit

Step 11:

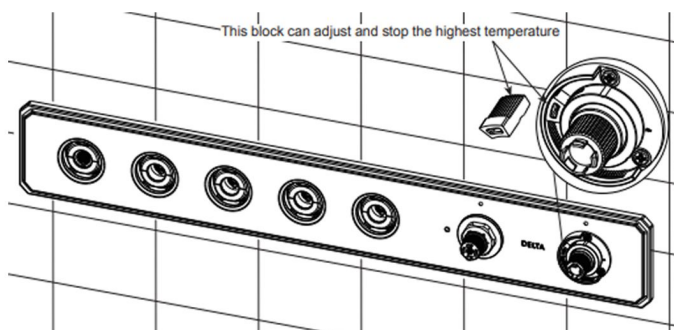


Rotate the thermo valve left and right to adjust the water temperature.

Step 8:

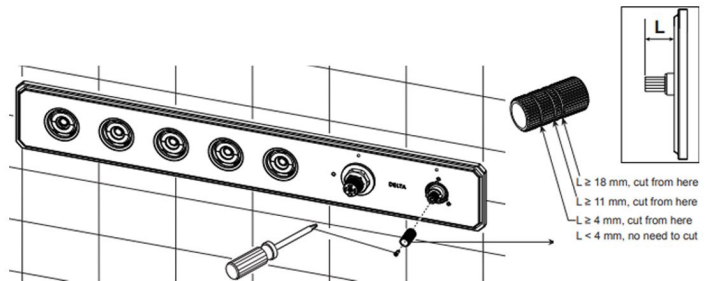


Install the extension for thermo valve and cut the rest of extension.

Step 10:

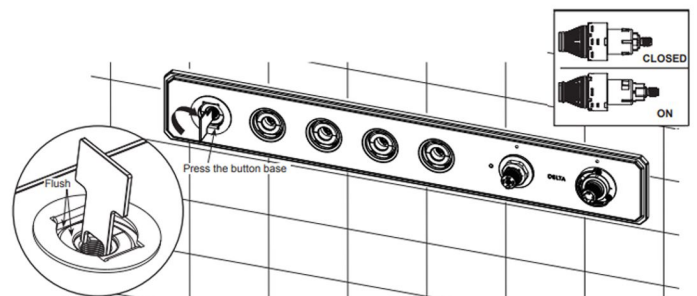

Rotate the wrench to let the nut go up and flush with the button base.
Note: The diverter valve must be in the closed position before adjusting the nut.

Step 12:

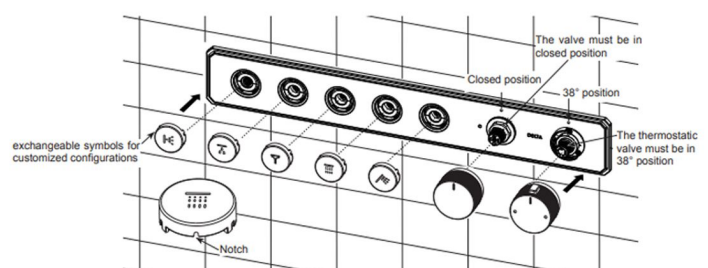


Install the buttons and handles. Note: The notch must be installed downward

Fontana Anover Matte Black Contemporary Multi-Function Shower Set


Product Code: FS6080MB

Hand Shower Installation Instructions:


Step 1:

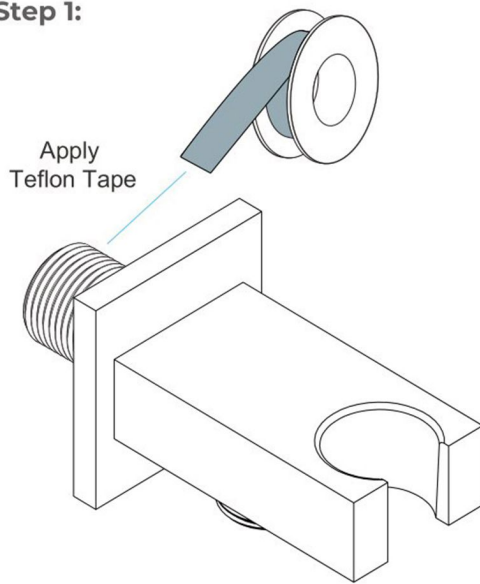


Step 2:

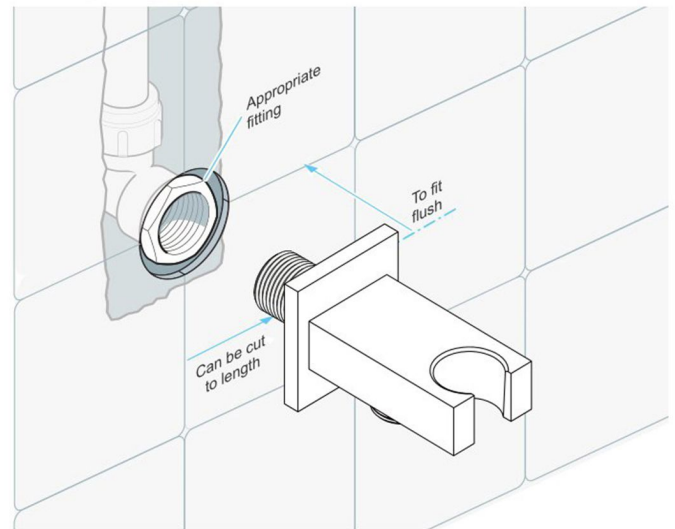

Step 3:

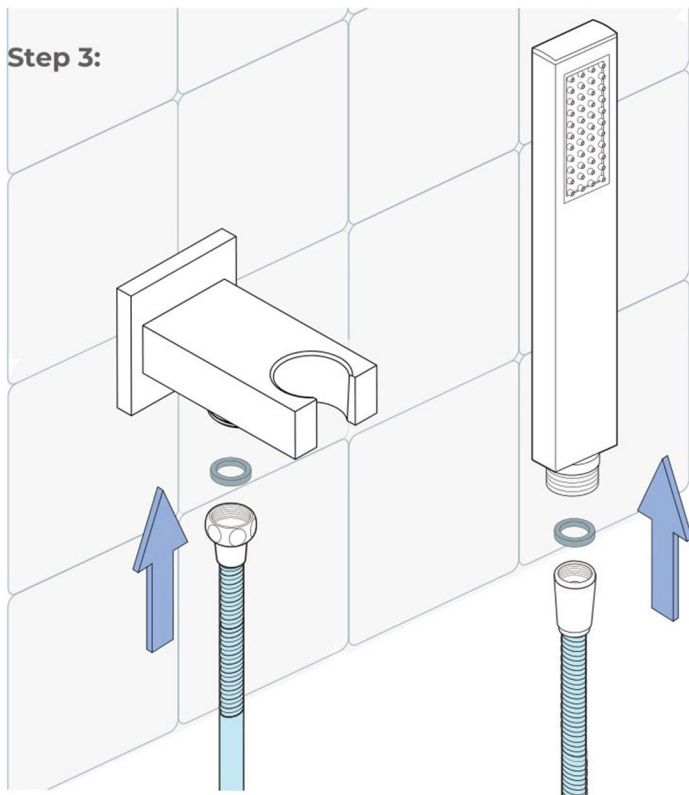

Step 4:

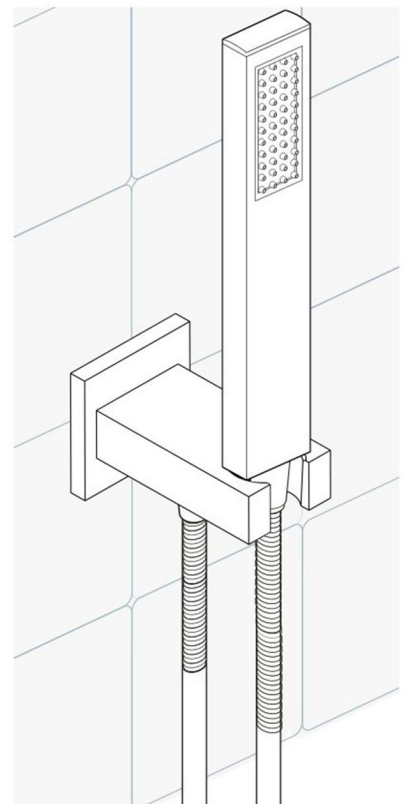

Hand Shower Outlet Installation

- Complete the outlet pipework ensuring it ends in an appropriate 15mm x 1/2" BSP female thread elbow.

Note: This fitting is not supplied as variations in installations require the selection of a suitable solder or compression fitting.

- Install the 'Wall Outlet', thread long male 1/2" BSP into the appropriate female fitting using PTFE tape to give a watertight joint.

Note: The thread can be cut to size if required. Make sure that all debris is removed from the connector and the section that has been cut is dressed correctly, before installation.

Fontana Anover Matte Black Contemporary Multi-Function Shower Set

Product Code: FS6080MB

General Information:

All products manufactured and supplied by Fontana are safe and comply to legislative requirements. Providing they are installed correctly and receive regular maintenance in accordance with these instructions your user experience will not be affected.

Care & Cleaning:

1. The product can be cleaned with warm water, a mild soap and a clean soft cloth.
2. Clean progressively and gently.
3. It is not required to use any abrasive cleaning pads, wire wool or cloths to clean the product.
4. Avoid a vigorous cleaning action, as this could contribute to denaturing and dulling
5. Abrasive or strong cleaning products containing ammonia, bleaches, alcohol, dyes, acids (hydrochloric, formic, phosphorus, chlorine or acetic) will be not be affected.
6. If using a spray cleaner, apply the cleaning agent onto a soft cloth, never directly spray onto the product as the cleaner may enter gaps and openings and cause damage. Do not allow the cleaner to remain on the product for a period of time. After cleaning, rinse thoroughly with clean water.

