



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver


*not included

Ceiling Mount Shower Installation Instructions:


Step 1:

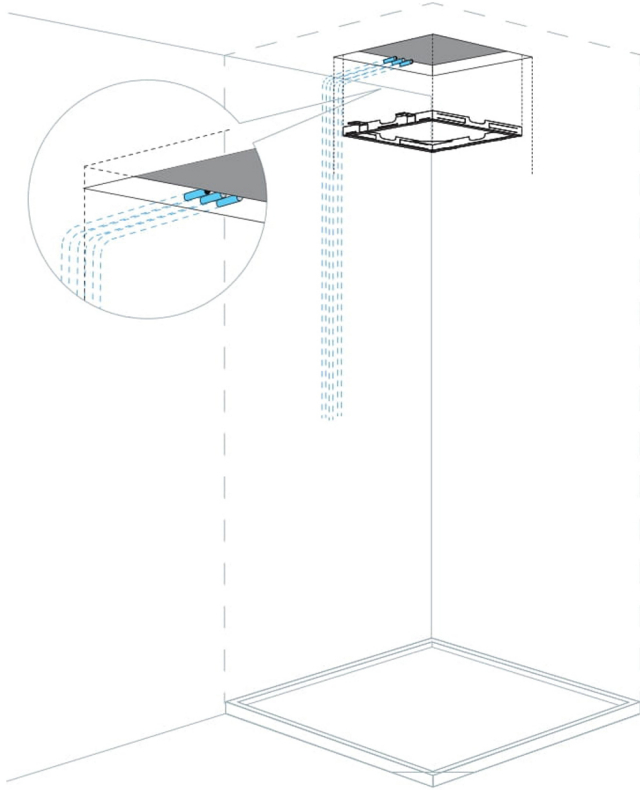


Step 2:

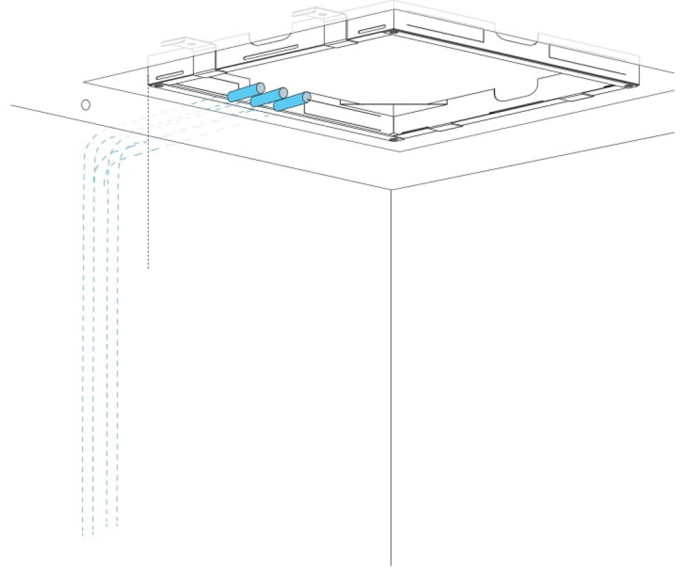


Step 3:

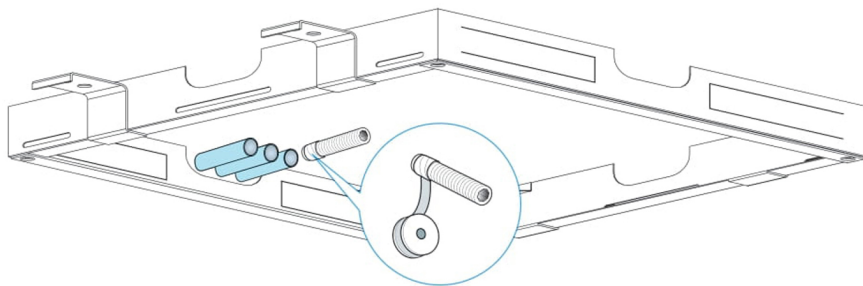


Step 4:

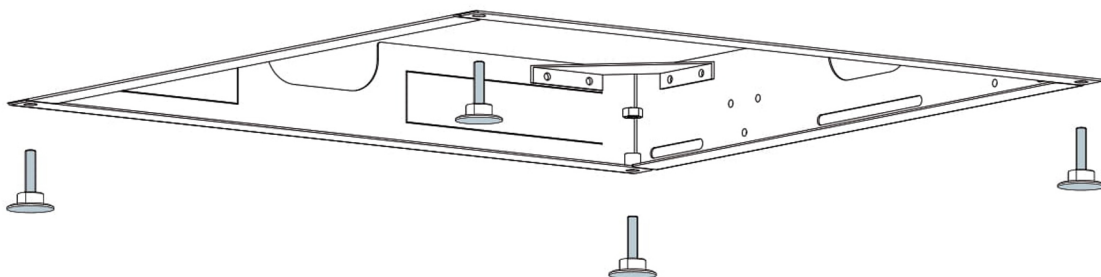


Step 5:

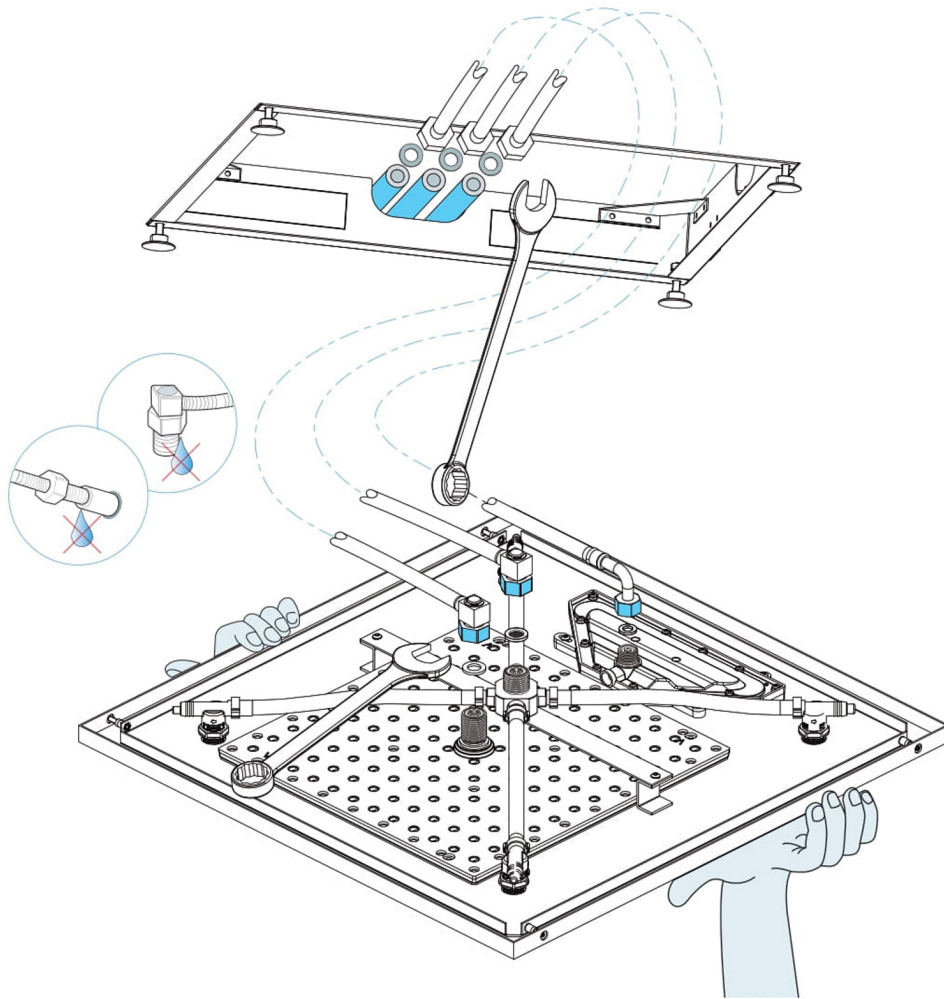


Step 6:

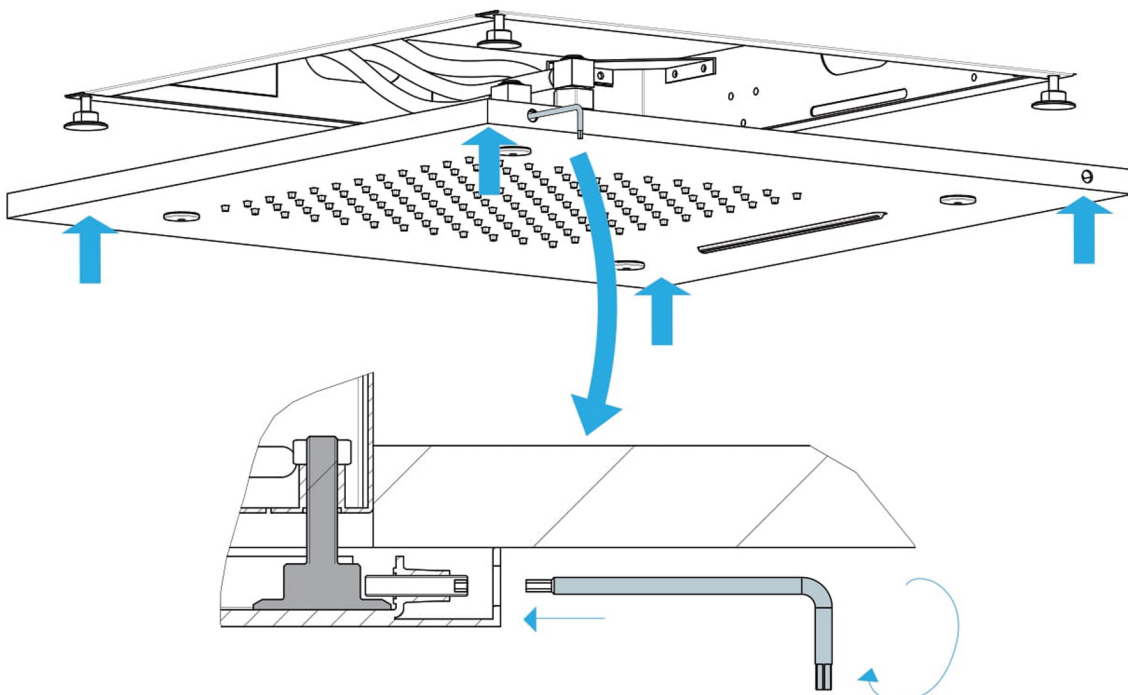


Step 7:

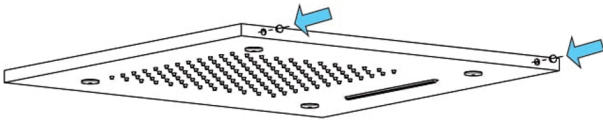

Step 8:

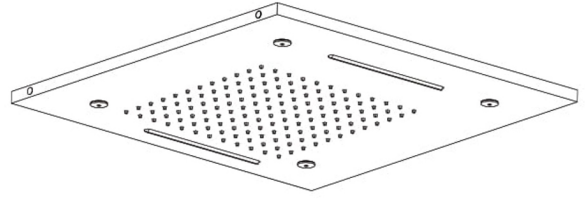

Step 9:

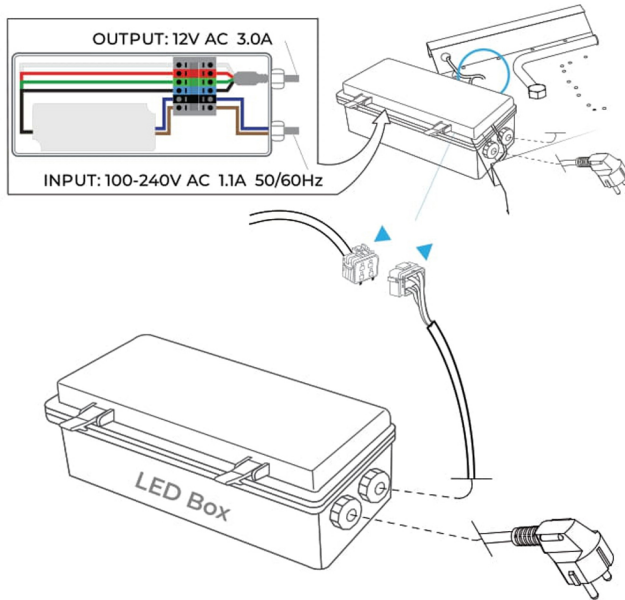

Step 10:

