



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker





Screwdriver

*not included

Fontana Lorca Brushed Nickel Hot And Cold Wall Mounted Bathtub Faucet



Product Code: FS7862BN

Installation Instructions:

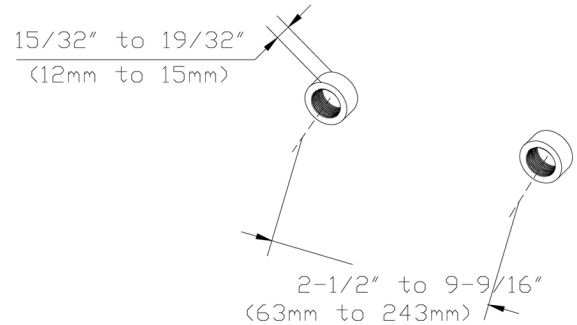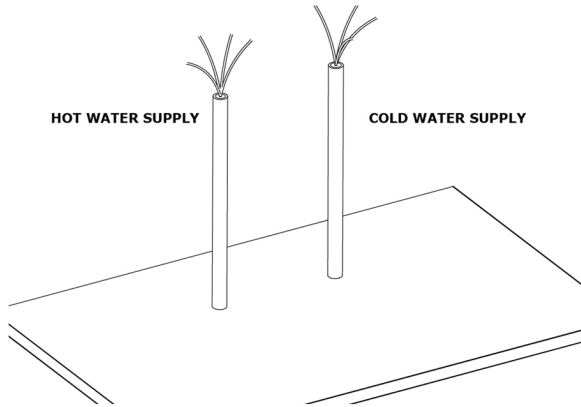



1. Turn on your shut-off valve for cleaning the hot and cold water supply pipe before connect to the faucet, allow the water flush 3~5 minutes to flush out dirt and debris. Shut off the water supply again after finish.

2. Install the cold and hot water supply elbow connector(NPT 1/2-14 in US/CA), the interval of the two supply elbow connector should be min 63mm (2-1/2") and max 243mm (9-9/16"), the elbow connector's face should be Min 12mm (15/32") and Max 15mm (19/32") reach out the finish wall surface. Replace existing tub filler faucet maybe need flange "B" to match if the elbow connectors' reach is less than 5mm(3/16")

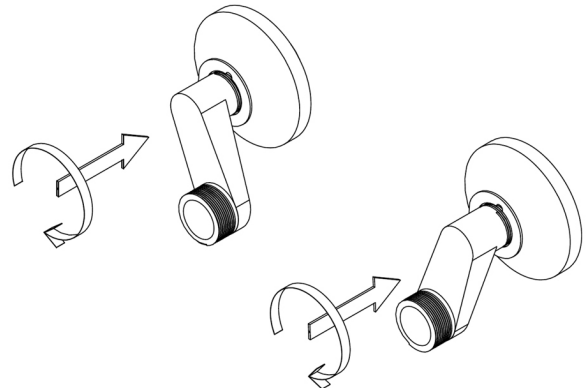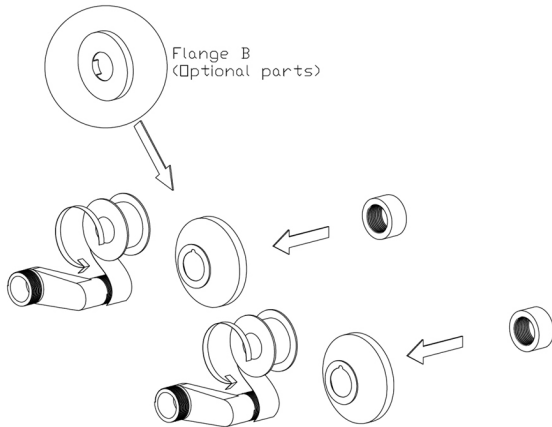

3. Apply Teflon tape on the thread of S-unions (nipple) and then place the flange to S-unions. (Remark: Using flange "B" to replace flange "A" if the elbow connectors' reach is less than 5mm(3/16").please contact Sumerain support if you need this optional flange"B")

4. Connect the S-unions to hot&cold supply elbow connectors.

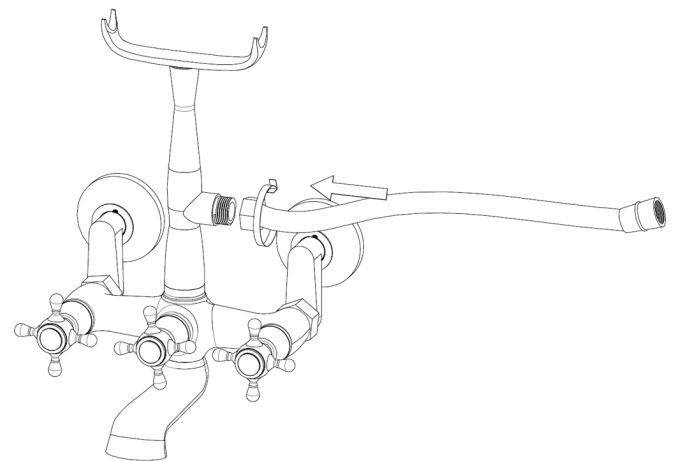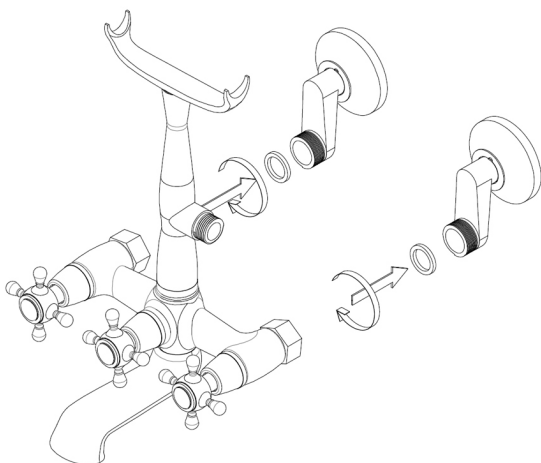


5. Install the faucet to S-unions.


6. Place a washer between the side hole of the shower cradle and the cone nut of the shower

Fontana Lorca Brushed Nickel Hot And Cold Wall Mounted Bathtub Faucet


Product Code: FS7862BN

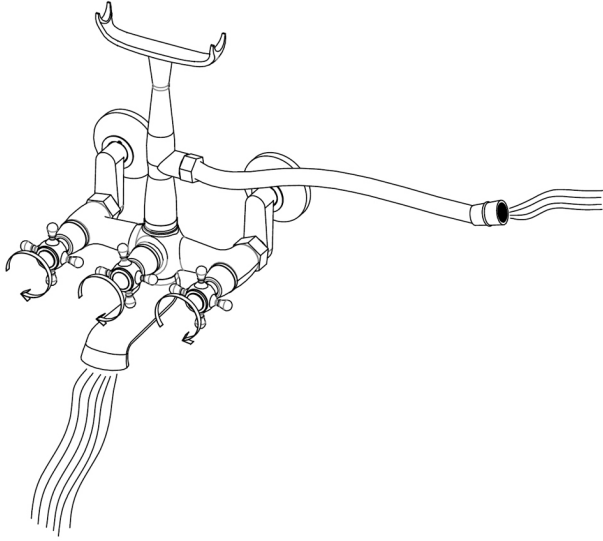

7. Turn on both hot and cold valves, let water run for at least one minute, this will clear any debris left in the line.

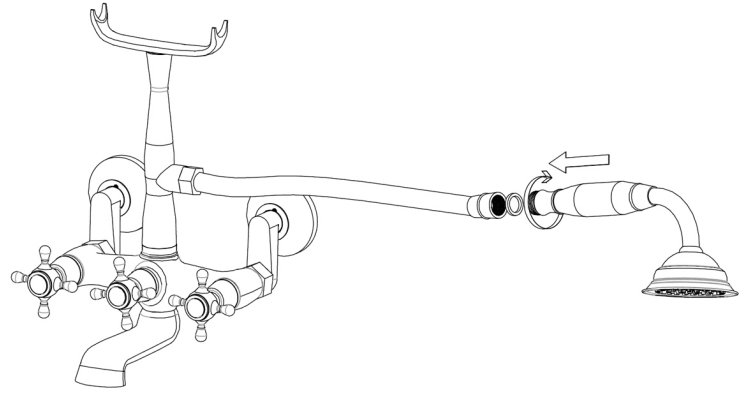

8. Place the washer between shower and shower hose connector, screwing the shower to connector in a clockwise direction

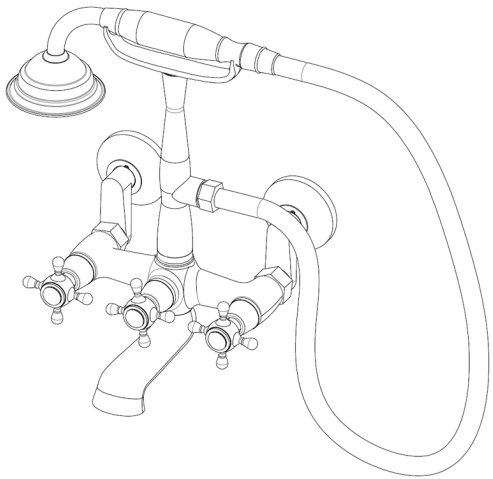

9. Install finish.