

Fontana Lombardy Chrome Large Square Shower Head with Massage Jets



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver


*not included

Wall Mount Shower Installations Instructions


Step 1:

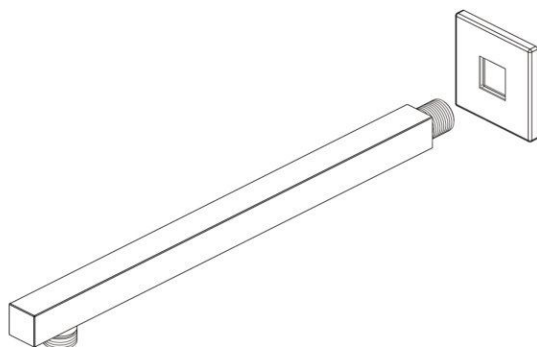


Step 2:

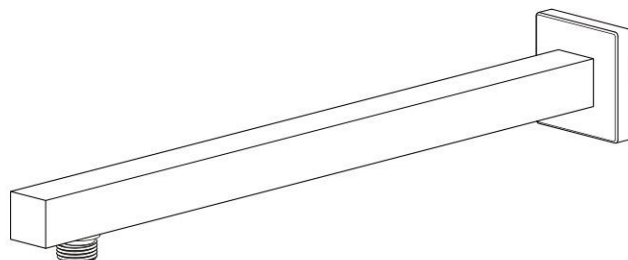


Step 3:

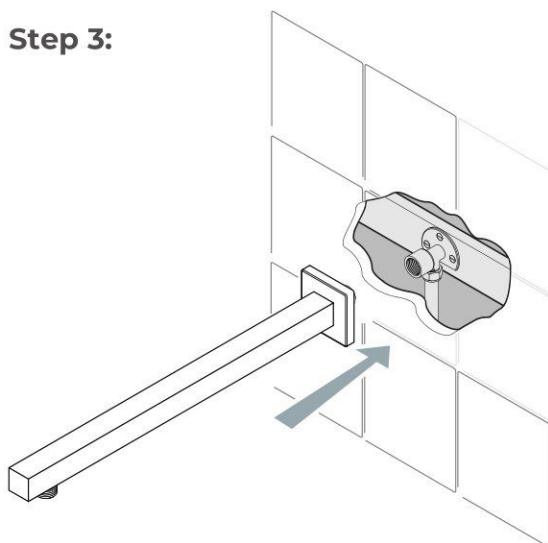


Step 4:

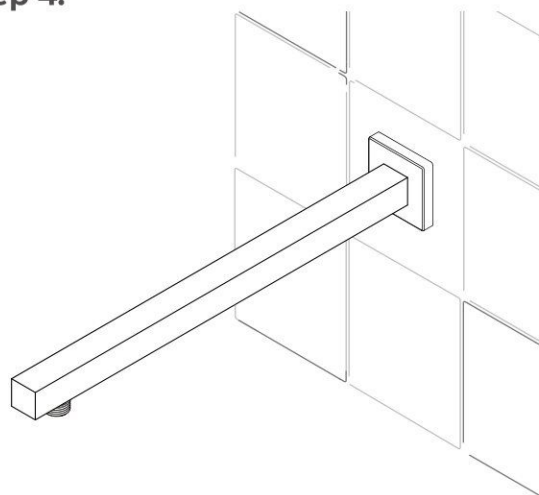


Step 5:

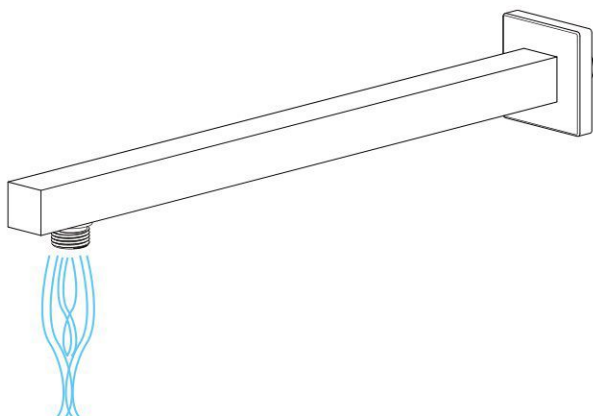

Step 6:

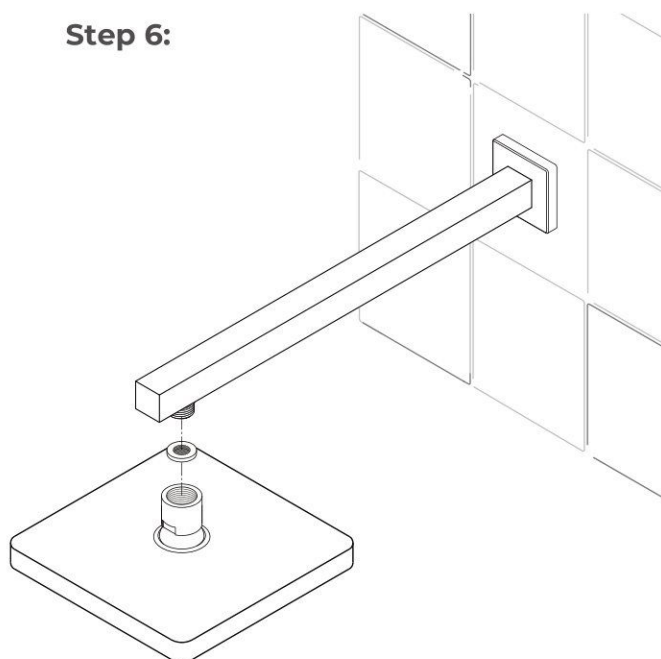

Step 7:

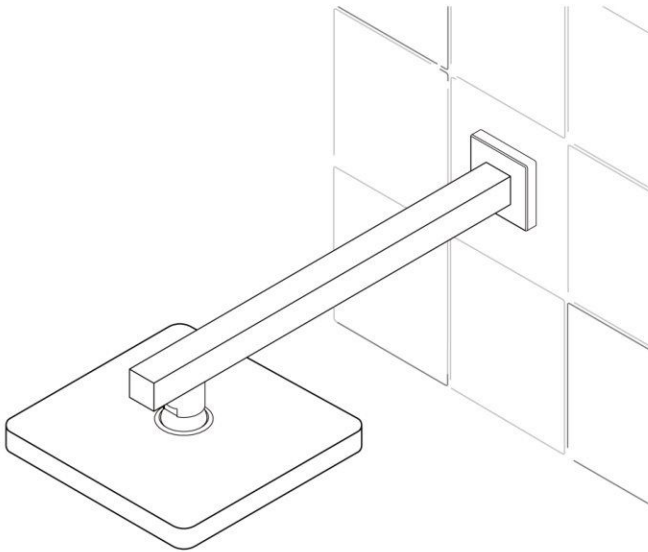


No tools required, G1/2" connector fits standard sized shower plumbing.




✓ Use your hands counterclockwise to unscrew the old showerhead and removed it.



✓ Take out the Hiendure Showerhead, make sure the shower filter is placed in the connector.

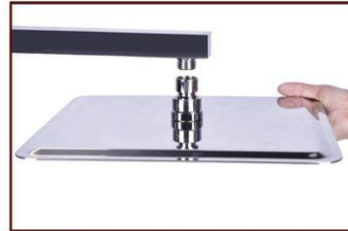

✓ Ensure the showerhead full horizontal alignment wall mounted shower arm thread

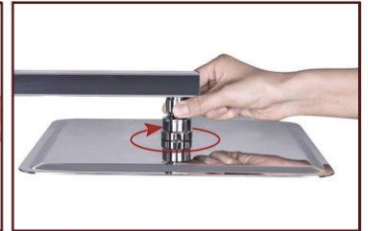


✓ Use your hands clockwise to tighten showerhead.

Product shown is only for installation display purpose


1. Apply plumber's tape to the threads on both ends of the shower arm and slide on the decorative escutcheon.
2. Insert the new arm into the fitting in the Wall and twist to tighten. Finish tightening with your adjustable wrench. Wrap a dry cloth around the shower arm to protect the finish while tightening with adjustable wrench.
3. Thread the new shower head onto the arm and hand-tighten. Hold the shower arm in place with groove joint pliers and finish tightening the shower head with your adjustable wrench. Wrap both in a dry cloth to protect the finish.
4. Before securing the decorative escutcheon, turn on the water supply to make sure that all connections are tight and there is no leaking. If no leaks are detected, continue with the installation. If leakage does occur, use your adjustable wrench to tighten the connections as necessary.
5. Apply a bead of silicone sealant to the back of the escutcheon and press firmly into place against the installation surface. Wipe away any excess sealant with your damp cloth.

Shower Mixer Installation Instructions


Step 1:

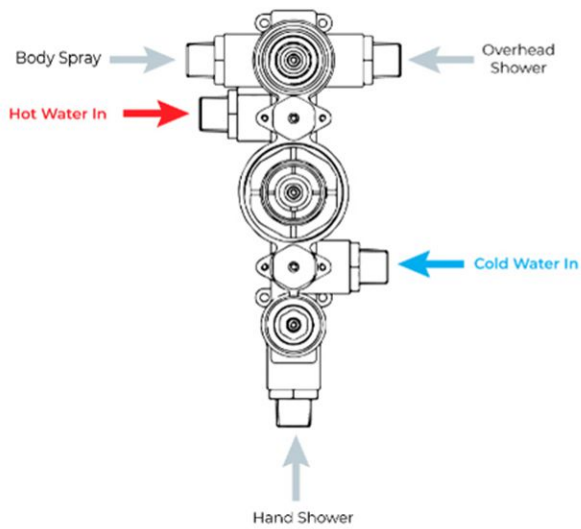


Step 2:

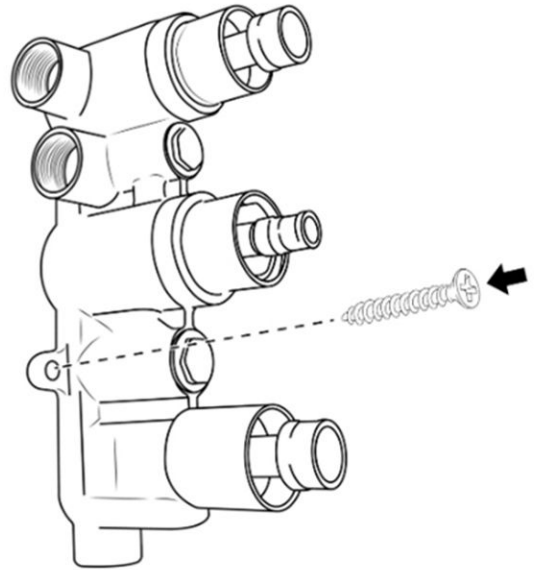


Step 3:

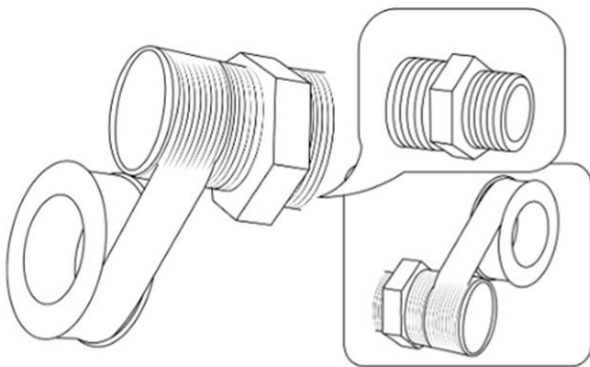


Step 4:

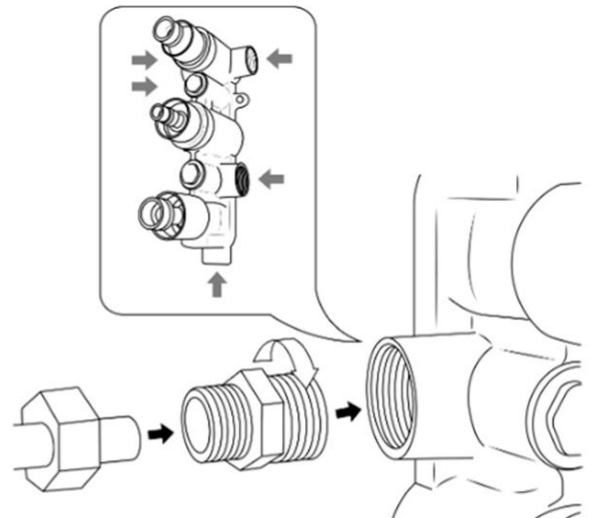


Step 5:

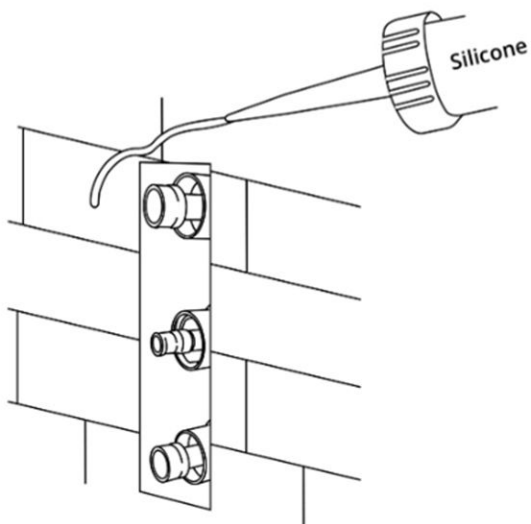


Step 6:

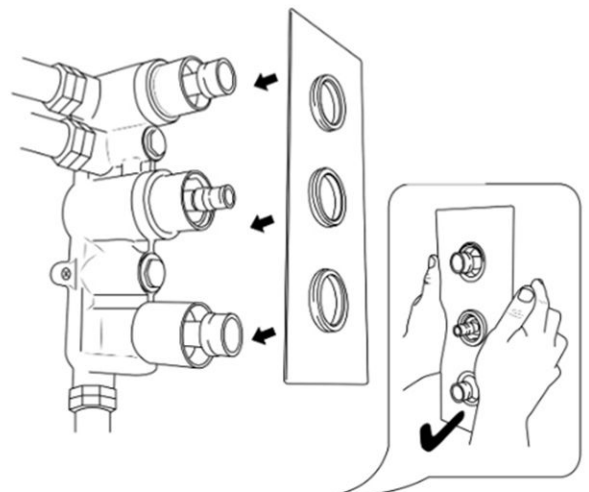

Step 7:

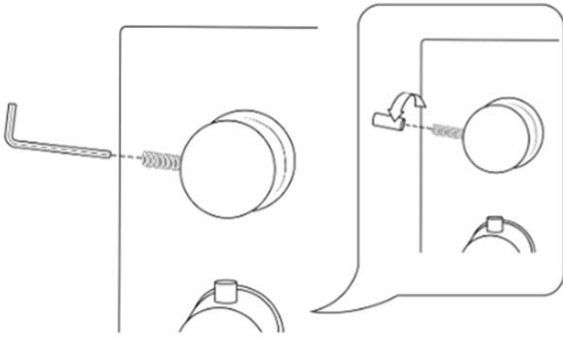


Step 8:

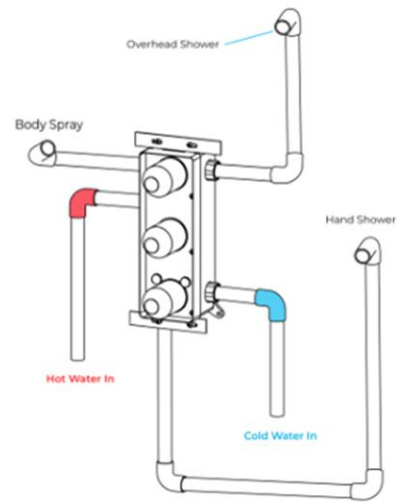


Shower Body Jets Installation Instructions:


Step 1:

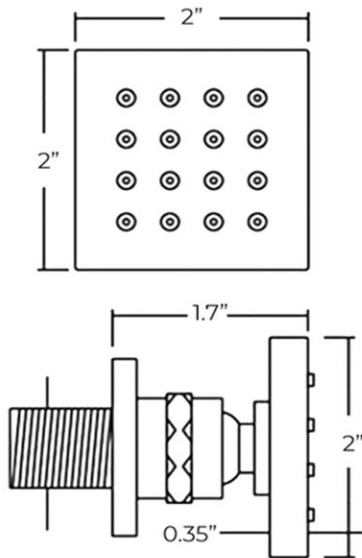


Step 2:

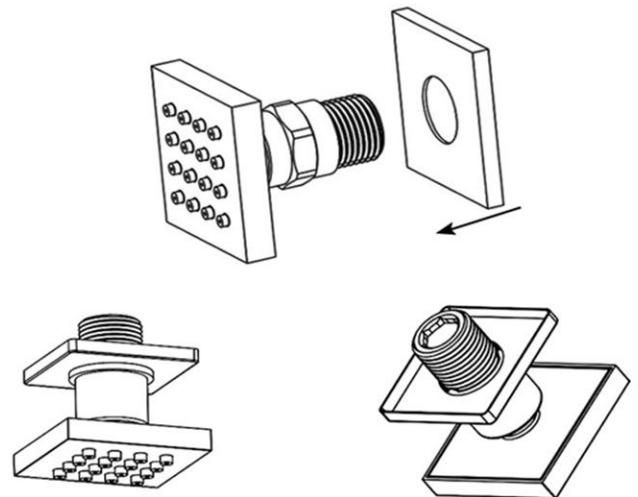


Step 3:

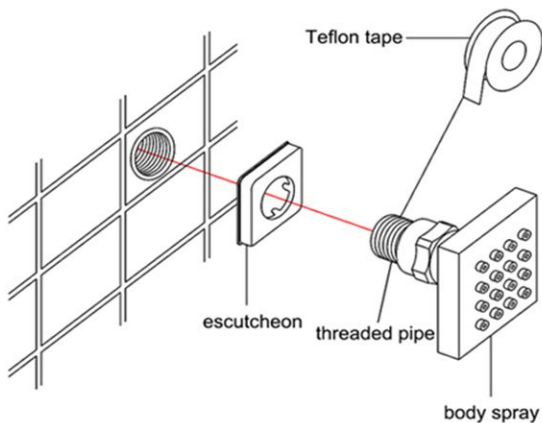

Step 4:

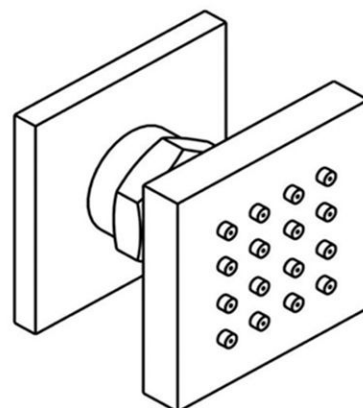


Step 6:

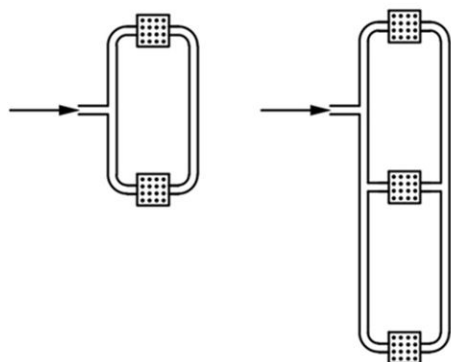


Hand Held Shower Installation Instructions:

Step 1:

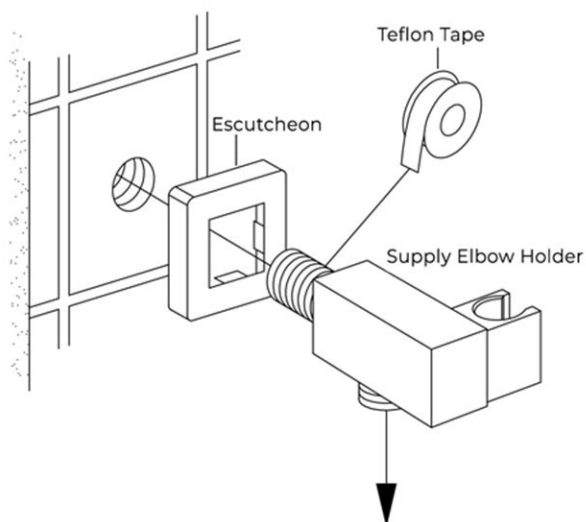

Step 2:

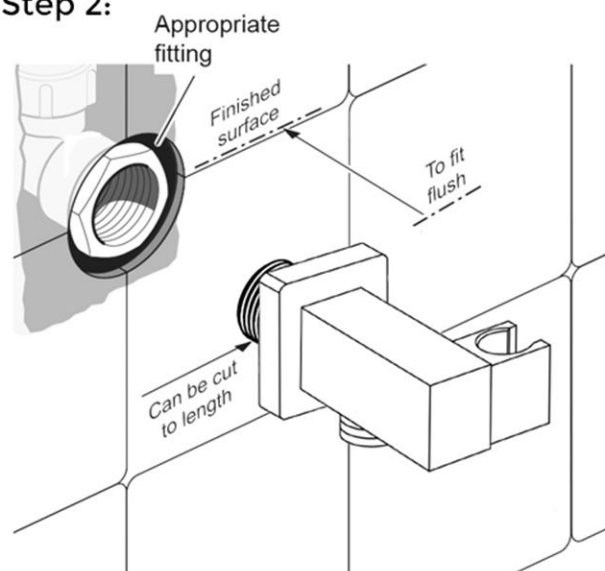

Step 3:

