



BEFORE YOU BEGIN

Before you begin, please read the installation instructions below. Observe all local building and safety codes.

Unpack and inspect the items for any shipping damages. If you find damages, do not install.

Please note all products must be installed by a professional and certified plumber otherwise warranty might be voided.

POSSIBLE TOOLS REQUIRED*



Plumbers Tape



Tape Measure



Level



Adjustable Wrench



Hex Wrench



Thread Sealant



Drill



Pencil or Marker




Screwdriver

*not included


Wall Mounted Dryer Installation Instructions:

Installing the Spout:

1. Cut a Ø29-33 mm hole in the wall at the desired location.

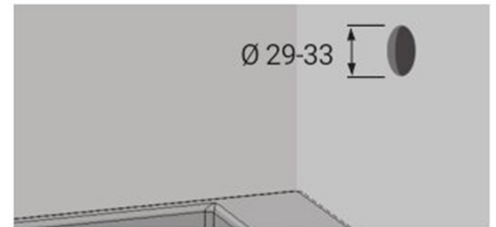

2. Insert the hand dryer spout into the hole in the wall and secure the base from the rear using the nut and disk. Secure the sheath to the base using the clamps.

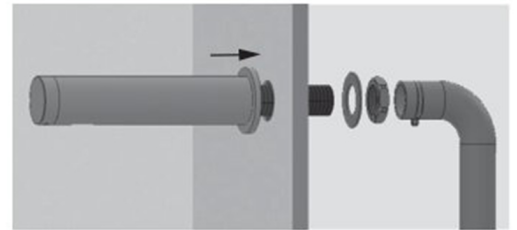


Installing The Motor Unit:


1. Position unit at the end of the air hose.
2. Mount the motor firmly to the wall.

NOTE :


- Hose length cannot be cut.
- Make sure the bottom of the unit has a clearing of at least 50 mm from any object.

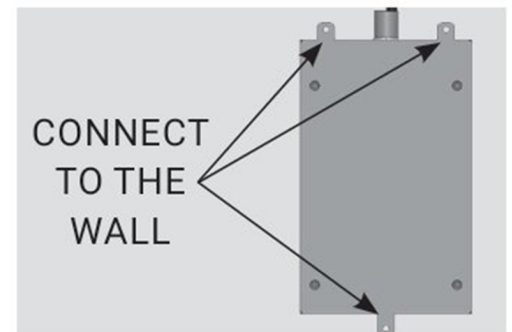

3. Connect the AUX cable coming from the sensor to the top of the motor.

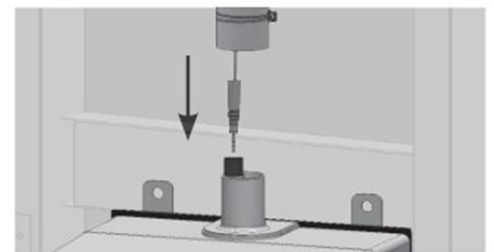

4. Please note that as the connector is waterproof, it may be necessary to apply some pressure. If the white o-ring is visible, the connection is not correct. Only the grooves should be visible.

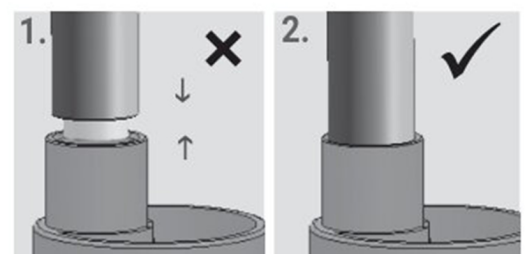


Fontana PulseAir™ – Chrome Edition

Product Code: FS10505CH

Bare Wire Connection Variant - Cable Change:

1. Remove the Hepa filter cover by pressing through the hole on the clip.

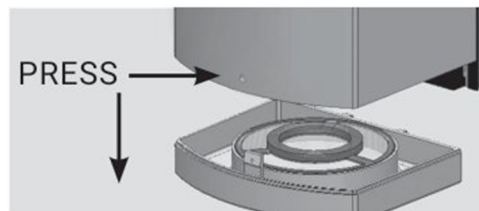


2. Remove the knob cover using a flat-head screwdriver. Remove screw using Allen key before removing the knob.




3. Loosen the lower locking bolt with a 3 mm Allen key.



4. Remove the 2 locking screws located on both sides of the motor unit using the Allen key supplied.

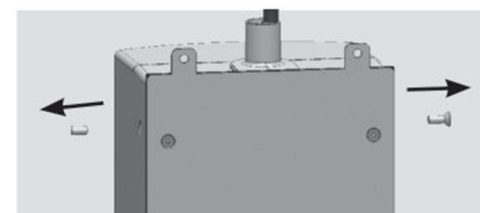


5. Remove the cover of the motor unit.

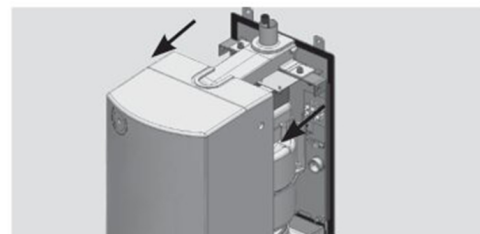

NOTE: To connect a hardwire cable or to change the existing power cable, see relevant section below.

6a. Loosen the screws on the terminal block to remove the electrical cable.


6b. Instead, screw on the bare-wire power supply cable connected to the electrical terminal.

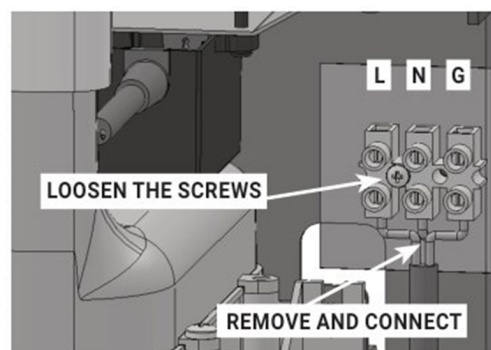


Reassemble cover, knob, and filter housing.

Connecting The Power Source:

1. Before proceeding, check that no objects are in front of the sensor.

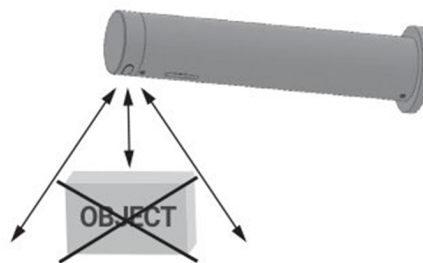

2. Remove the protective sticker and exit sensor range.

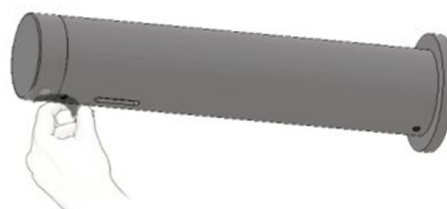

3. Connect to power.



4. After connecting the power source, wait 15 seconds to allow the system to set the ideal sensor range.



NOTE: The power of the hand dryer can be adjusted more or less using the control knob on the motor unit.



Changing The Filter:

Remove the Hepa filter cover by pressing through the hole on the clip. Remove and clean, or replace filter. Click the filter cover back into place.

